



**800 SERIES**  
**804S LOW PROFILE SINGLE and MULTI-LAMP**  
**804 (Legacy Model)**  
INSTALLATION INSTRUCTIONS



SCAN QR CODE FOR INSTRUCTIONS

**WARNING:** Read and understand these instructions completely before installation. To be installed by qualified electricians only. Products should be installed in accordance with these instructions, local electrical codes, and the National Electric Code (NEC). These products may represent a possible shock or fire hazard if improperly installed.

**CAUTION:** Disconnect power at circuit breaker or fuse panel before installation or servicing. Always allow LED assembly to cool before servicing. Do not connect or disconnect LED lamp module wire connector when fixture is energized as this may result in permanent damage to the LED. Do not install where insulation or ambient temperatures will exceed maximum values noted in product specifications. See [www.8lighting.com](http://www.8lighting.com) for current product specifications.

**NOTE:** Number Eight Lighting fixtures are designed to meet the latest NEC requirements and are listed in full compliance with UL standards. Before attempting installation, check your local electrical code which sets the wiring standards and installation requirements for your locality and should be understood before starting work.

**SAVE THESE INSTRUCTIONS.**

## TABLE OF CONTENTS

|   | <b>PAGE</b> |
|---|-------------|
| HOUSING INSTALLATION - BAR HANGER MOUNTING.....           | 1-3         |
| HOUSING INSTALLATION - PANEL MOUNTING BRACKETS.....       | 4           |
| HOUSING INSTALLATION - T-BAR MOUNTING.....                | 5           |
| HOUSING INSTALLATION - BUTTERFLY BRACKET MOUNTING.....    | 6           |
| CEILING CUT-OUTS - PLASTER/SHEETROCK CEILINGS.....        | 7           |
| CEILING CUT-OUTS - WOOD/STONE ACOUSTIC TILE CEILINGS..... | 8           |
| LAMP MODULE INSTALLATION, ADJUSTMENT, REMOVAL.....        | 9-13        |
| POWER SUPPLY REMOVAL AND REPLACEMENT.....                 | 14          |
| WIRING INSTRUCTIONS - SINGLE LAMP.....                    | 15-19       |
| WIRING INSTRUCTIONS - SINGLE LAMP TUNABLE WHITE.....      | 20-22       |
| WIRING INSTRUCTIONS - MULTI-LAMP.....                     | 23-28       |
| WIRING INSTRUCTIONS - MULTI-LAMP TUNABLE WHITE.....       | 29-31       |

# HOUSING INSTALLATION

## Bar Hanger Mounting

**STEP 1 IMPORTANT:** Before attaching Bar Hanger Bracket you must determine Trim Model to be used (refer to Trim Types on **Pages 7-8**). Select upper or lower Bracket hole position (refer to **Table 1.1 Hanger Bar Bracket Positioning**).

**Note:** For **FS-P, FR-P, INR-P, INS-P** Trims, ceiling thickness is measured from bottom face of ceiling joist to bottom face of sheetrock. Ceiling thickness range and hole position applies to both P-1 & P-2 Trims.

Refer to plaster trim installation instructions for additional details.


**STEP 2** Loosen 2 screws slightly on Housing to attach or adjust each Bar Hanger Bracket. Position Bar Hanger Bracket in hole position #1 or #2 & secure screws – **FIG 1.1 & 1.2**.

**STEP 3** Assemble Bar Hanger A & B through each Bar Hanger Bracket to slide onto each other. The ends should have 1" minimum overlap.


**Note:** Bar Hangers can be shortened at break locations shown – **FIG 1.1**.

| 800 Series Trim Models               | For Ceiling Thickness Range | Hole Position #  |          |
|--------------------------------------|-----------------------------|------------------|----------|
| FR-P, FS-P                           | 1/2" to 1"                  | Lower #1         |          |
| INR-P, INS-P, INR-BV-P, INS-BV-P     | 1/2" to 1"                  | Upper #2         |          |
|                                      | 1" to 1-1/2"                | Lower #1         |          |
| FS-W, FS-W-M, FLS-W                  | 1/4" to 3/4"                | Upper #2         |          |
|                                      | 3/4" to 1-1/2"              | Lower #1         |          |
| INS-W, FLINS-W, INS-BV-W, FLINS-BV-W | 1/2" to 1"                  | Upper #2         |          |
|                                      | 1" to 1-1/2"                | Lower #1         |          |
| FR-W, FR-W-M, FLR-W                  | Standard Mounting Ring      | 1/2" to 1"       | Upper #2 |
|                                      |                             | 1" to 1-1/2"     | Lower #1 |
| INR-W, FLINR-W, INR-BV-W, FLINR-BV-W | Standard Mounting Ring      | 1/2" to 3/4"     | Upper #2 |
|                                      |                             | 1" to 1-1/4"     | Lower #1 |
|                                      | Tall Mounting Ring          | 3/4" to 1"       | Upper #2 |
|                                      |                             | 1-1/4" to 1-1/2" | Lower #1 |

### End Mounting

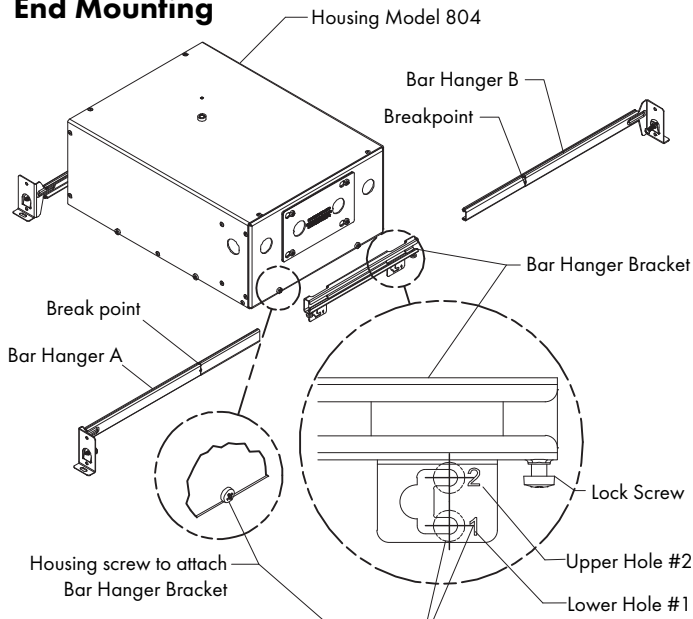


### Side Mounting

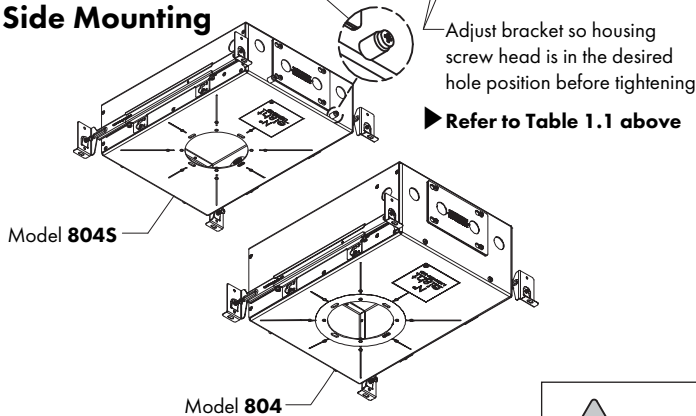


### IMPORTANT:

Install so Bar Hanger flanges are positioned as shown

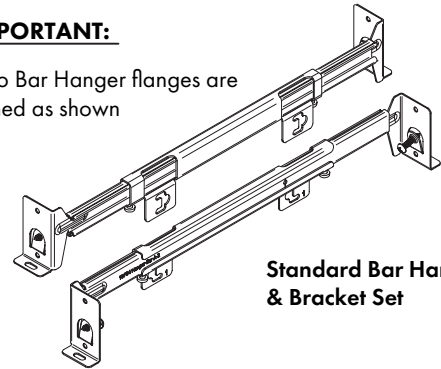


Standard Bar Hanger & Bracket Set

### Hole Position Upper #2

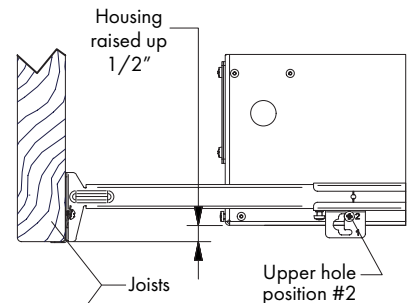

### Hole Position Lower #1

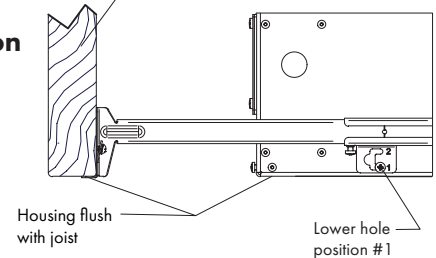

### CAUTION:

Be sure to select correct hole position for intended Trim assembly. Changing hole position is not possible after ceiling is installed.

**FIG 1.1** Installing Bar Hanger & Bar Hanger Bracket Set


**FIG 1.2** Hole Position & Housing Location

# HOUSING INSTALLATION

## Bar Hanger Mounting - Multi-lamp Housings


**Note:** Pre-install Bar Hanger & Bracket sets to housing as shown. Refer to Page 1 for assembly and positioning details.

**Model 804S-2**

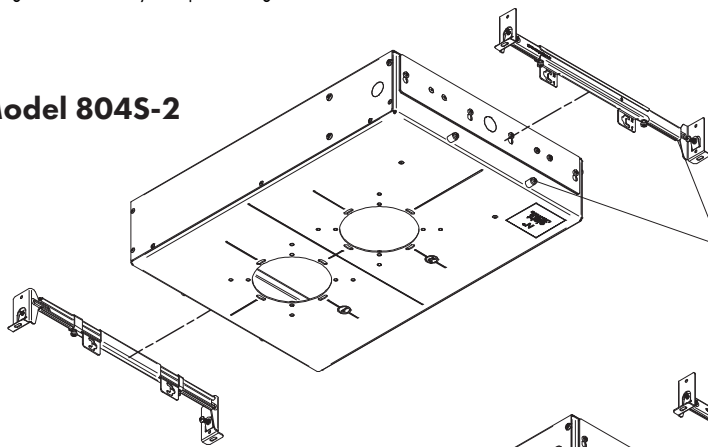


Hanger Bars are end mount only for all Multi-lamp housings


**Model 804S-3**

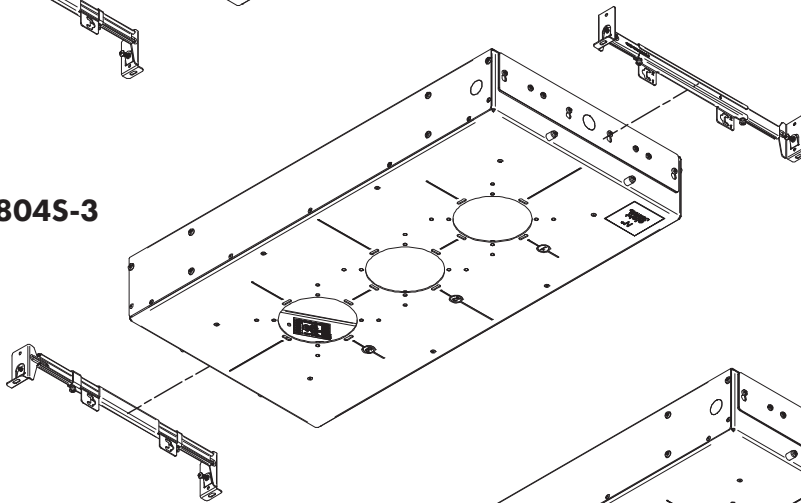

**Model 804S-4**

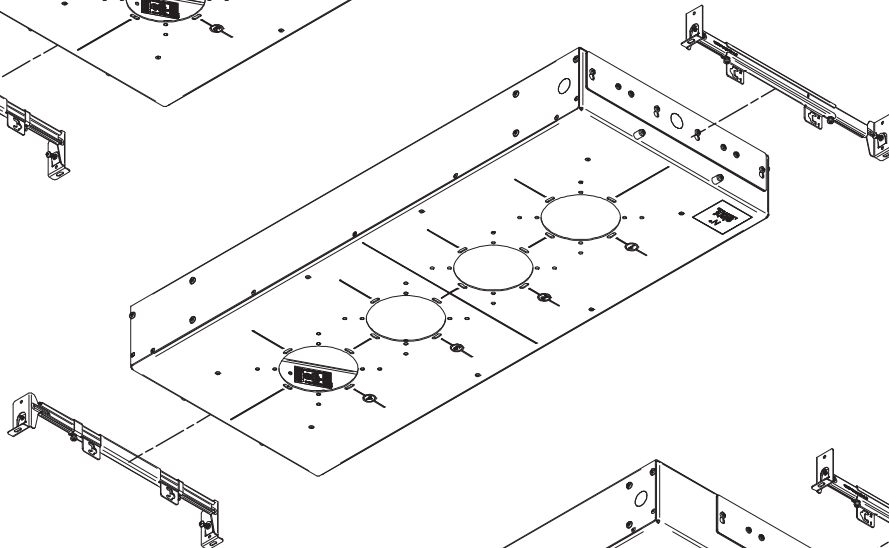

**Model 804S-4Q**

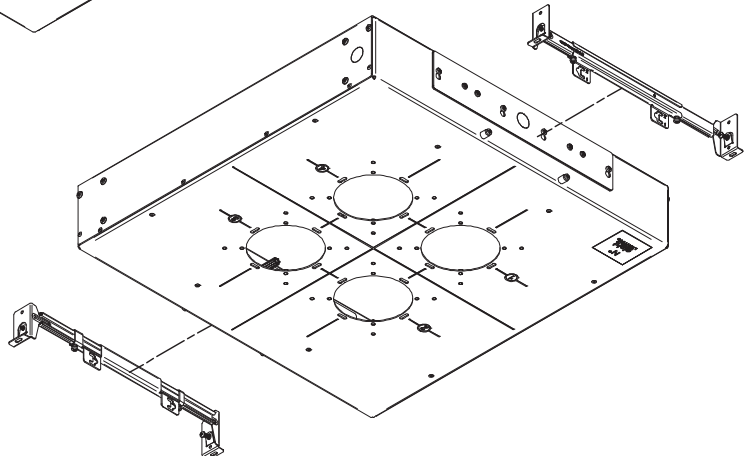

# HOUSING INSTALLATION

## Mounting Housing To Joists & Sticker Application


**STEP 1** Spread Hanger Bars to approximate joist spacing. Temporarily secure Lock Screws to keep Housing from sliding along Hanger Bars – **FIG 3.1 & 3.2.**

**Note:** For Sloped Ceilings - Installing Housing so J Box Cover faces wall is recommended – **FIG. 3.3.**


**STEP 2** Secure Housing & Hanger Bar assembly to Joists using either the fasteners supplied on Hanger Bars or fasteners through alternate mounting holes – **FIG 3.1.**

**STEP 3** Reposition Housing along Hanger Bars as needed. Use guide lines to help locate Housing relative to nearby walls or other fixtures – **FIG 3.1 & 3.2.**


**STEP 4** Apply Stickers over unused holes & slots as shown to prevent light leaks & maintain airtight standards compliance. No caulking required – **FIG 3.4.**

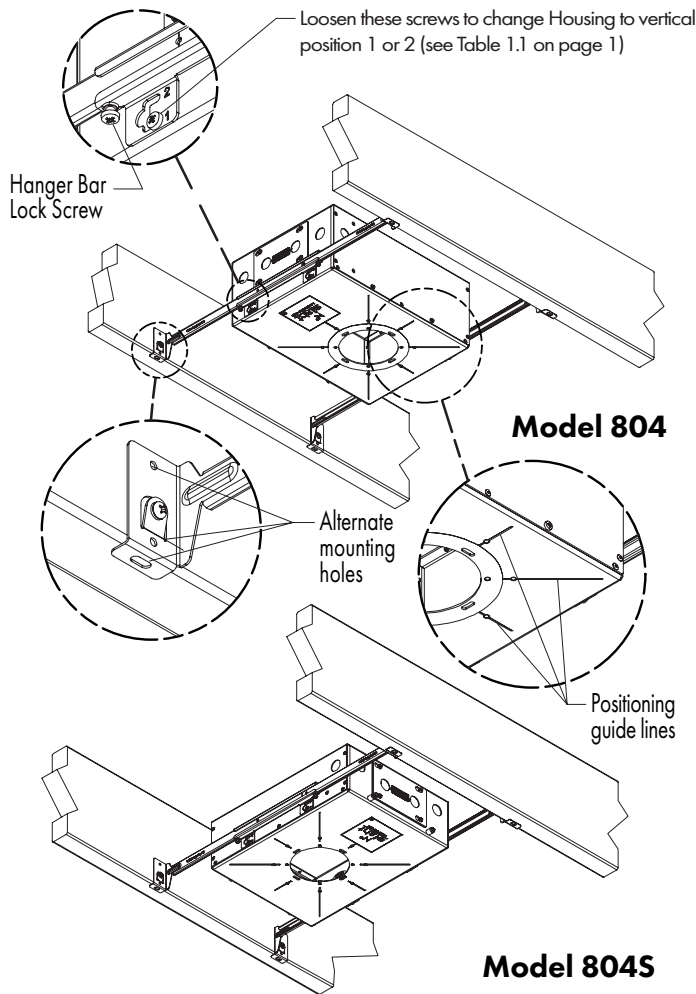

**FIG 3.1** Fastening Housing to joists

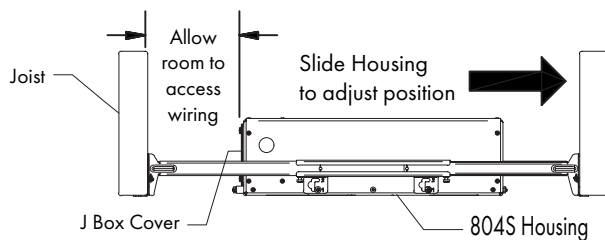


**FIG 3.2** Horizontal Housing adjustment

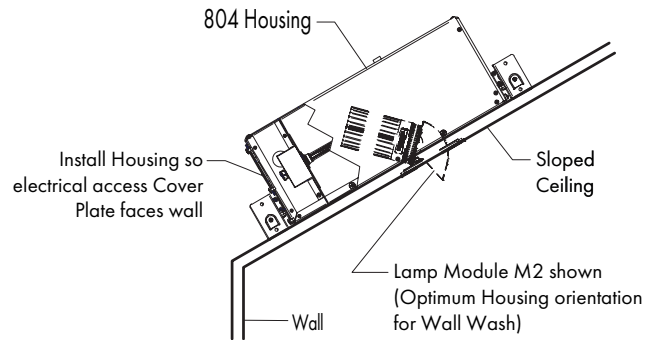


**FIG 3.3** Recommended Sloped Ceiling Orientation

**IMPORTANT** For Airtight Compliance - Stickers are required on all 804 & 804S Housings

Wood/Stone Ceiling

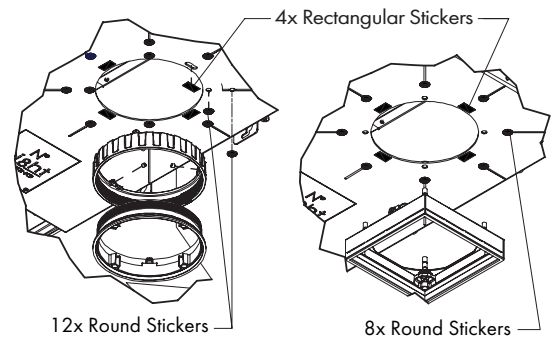

Plaster/Sheetrock Ceiling

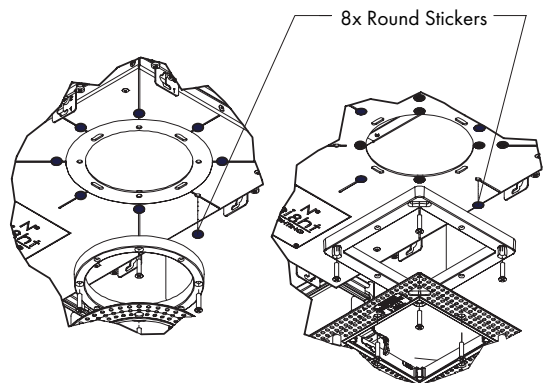

**FIG 3.4** Sticker Application

# HOUSING INSTALLATION

## PMB - Panel Mounting Brackets

**CAUTION:** Read all instructions completely before proceeding.

**Important:** Before attaching Panel Mounting Brackets you must determine Trim Model to be used (refer to Trim Types on Pages 7-8).

**Note:** Panel may consist of wood, stone or other structural material. Sheetrock could also be used attached below panel & must be considered part of the overall ceiling thickness.


**STEP 1** Select upper or lower Bracket position (refer to **Table 4.1** Panel Mounting Bracket Position) & attach 2x Panel Mounting Brackets to Housing as shown using screws supplied with Housing (use side or end mounting locations as needed) - **FIG 4.1 & FIG 4.2.**

**STEP 2** Locate & cut hole in ceiling panel (refer to Trim types and hole sizes specified on (Pages 7-8) - **FIG 4.1.**



**STEP 3** Align Housing so aperture is centered in ceiling cut-out & secure Panel Mounting Brackets to panel using 4x Screws suitable for mounting surface (not supplied) - **FIG 4.1.**

Table 4.1 Panel Mounting Bracket Position Chart

| 800 Series Trim Models                       | For Ceiling Thickness Range            | Hole Position # |
|--|--|-----------------|
| FR-P, FS-P                                   | 1/2" to 1"                             | Lower #1        |
| INR-P, INS-P,<br>INR-BV-P, INS-BV-P          | 1/2" to 1"                             | Upper #2        |
|  | 1" to 1-1/2"                           | Lower #1        |
| FS-W, FS-W-M, FLS-W                          | 1/4" to 3/4"                           | Upper #2        |
|  | 3/4" to 1-1/2"                         | Lower #1        |
| INS-W, FLINS-W,<br>INS-BV-W, FLINS-BV-W      | 1/2" to 1"                             | Upper #2        |
|  | 1" to 1-1/2"                           | Lower #1        |
| FR-W, FR-W-M,<br>FLR-W                       | Standard Mounting Ring<br>1/2" to 1"   | Upper #2        |
|  | 1" to 1-1/2"                           | Lower #1        |
| INR-W,<br>FLINR-W,<br>INR-BV-W<br>FLINR-BV-W | Standard Mounting Ring<br>1/2" to 3/4" | Upper #2        |
|  | 1" to 1-1/4"                           | Lower #1        |
|  | Tall Mounting Ring<br>3/4" to 1"       | Upper #2        |
|  | 1-1/4" to 1-1/2"                       | Lower #1        |

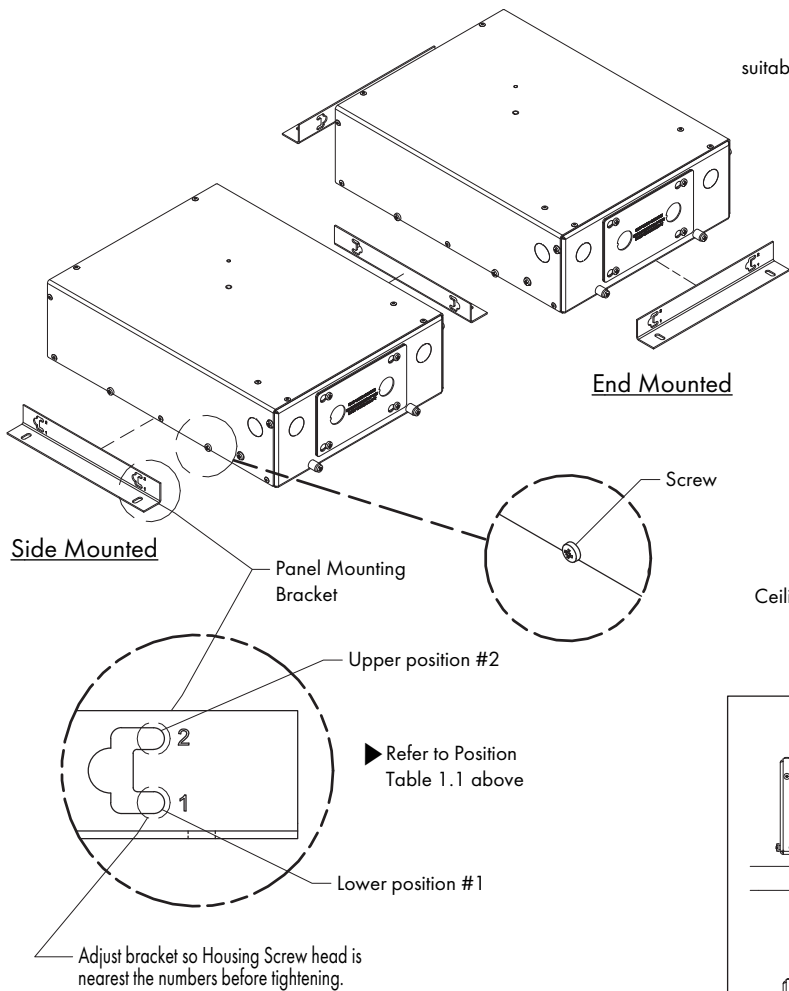

**FIG 4.1** Install Panel Mounting Brackets

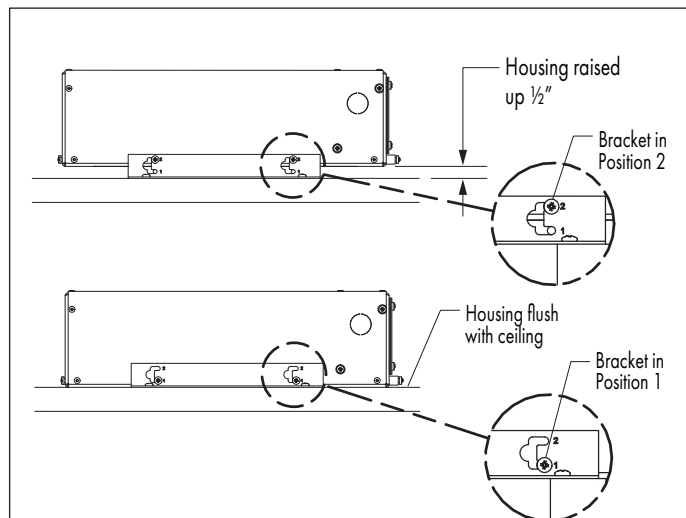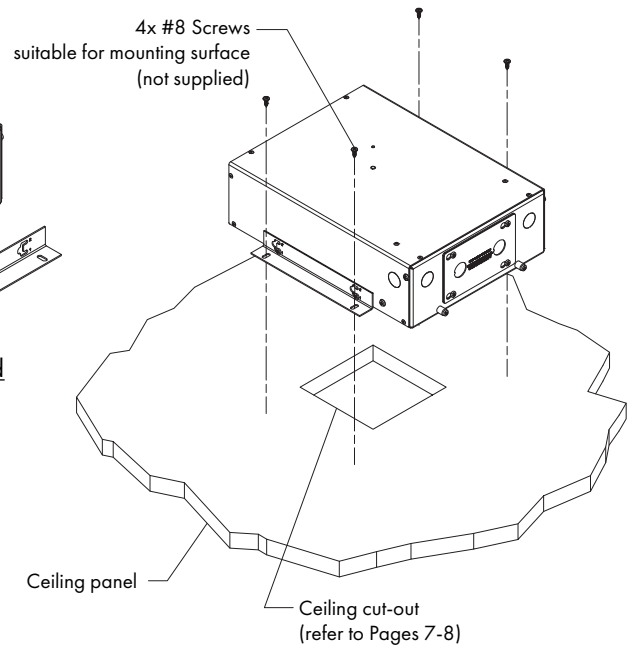

**FIG 4.2** Panel Mounting Bracket Position

# HOUSING INSTALLATION



## TBC - T-BAR Clips for T-GRID Mounting with Bar Hangers

**Important:** Before attaching Bar Hangers you must determine Trim Model to be used (refer to Trim Types on Page 7-8).

**STEP 1** Pre-assemble T-Grid Clips to Bar Hangers & tighten Bar Hanger Mounting Screws just enough to allow for vertical adjustment of Hanger Bracket - **FIG 5.1**.

**STEP 2** Attach Bar Hanger Brackets to Housing in hole position 1 or 2 to accommodate Trim Model & ceiling tile thickness (refer to Page 1 - Table 1.1) - **FIG. 5.2**.

**CAUTION:** Hanger Bar hole position cannot be changed after ceiling is installed.

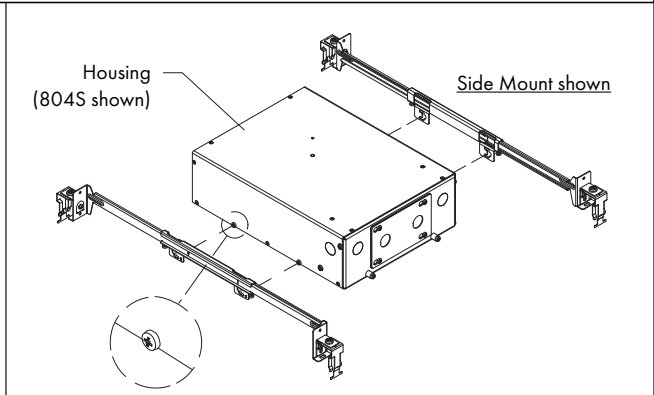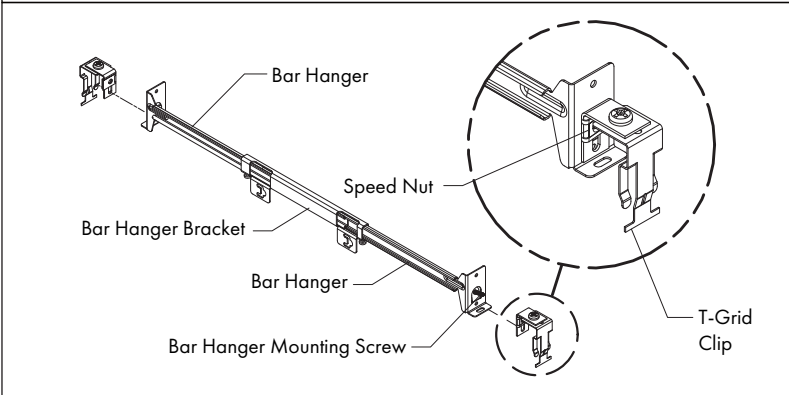

**FIG 5.1** Attach T-Grid Clip assemblies to Hanger Bracket Assemblies

**FIG 5.2** Attach Hanger Bracket Assemblies to Housing


**STEP 3** Extend Hanger bars to position T-Grid Clip assemblies fixture onto T-Grid bars - **FIG 5.4**.

**STEP 4** Determine cut-out location in Ceiling Tile and ensure sufficient clearance for housing installation. Locate & cut hole in Ceiling Tile (refer to Trim Types and hole sizes specified on Pages 7-8). Install Ceiling Tile into T-Grid - **FIG 5.5**.


**STEP 5** Attach fixture to T-Grid and adjust horizontal fixture position so Housing aperture is centered with Ceiling Tile opening. Lock fixture into place by tightening the Bar Hanger Lock Screws - **FIG 5.5**.

**STEP 6** Adjust vertical height of Housing by sliding speed nuts so Housing is level with Ceiling Tile. Lock position by tightening Mounting Screws - **FIG 5.6**.


**Note:** Trim will permit a vertical adjustment range to help accommodate Ceiling Tile thickness.

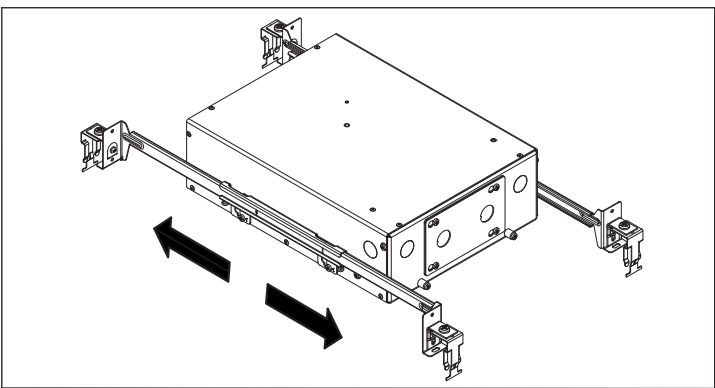


**FIG 5.3** Adjust Hanger Bars

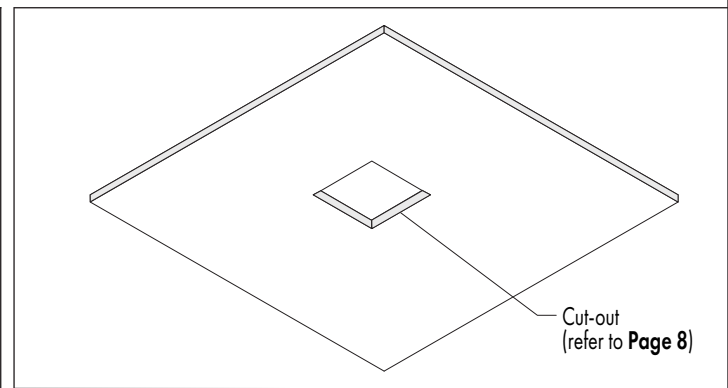

**FIG. 5.4** Cut opening in Ceiling Tile

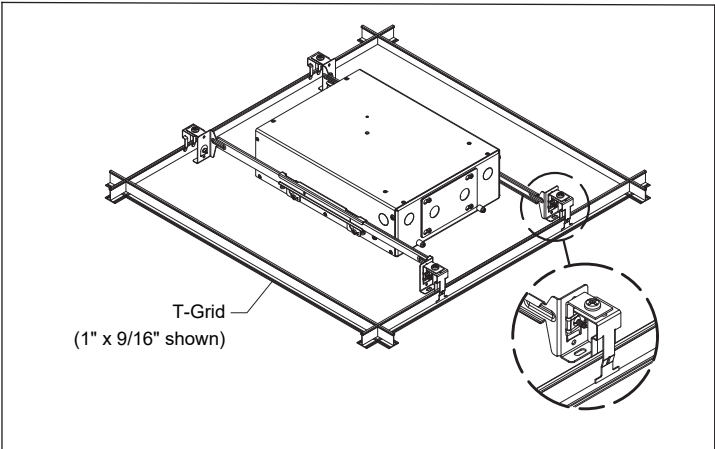

**FIG 5.5** Attach to T-Grid

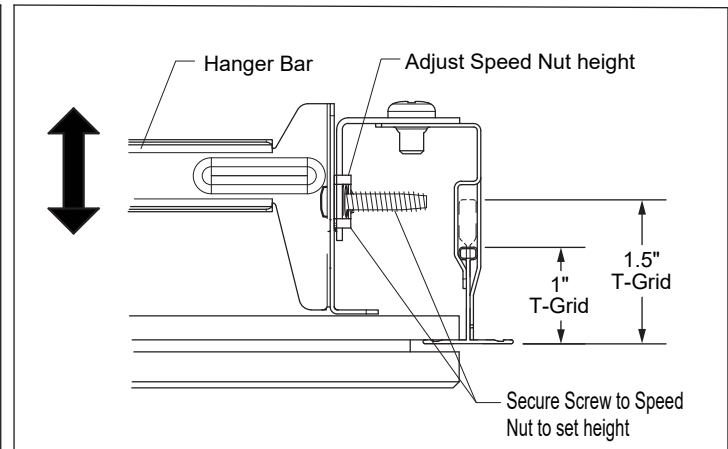

**FIG 5.6** Adjust vertical Housing height

# INSTALLATION INSTRUCTIONS


## BB - Butterfly Bracket - For Commercial C-CHANNEL or T-GRID Mounting

**STEP 1** Attach Butterfly Brackets to either ends or sides of mounting frame using existing screws - **FIG 6.2**.


**STEP 2** Slide c-channel or bar through bracket and adjust height with thumb screw - **FIG 6.3**.



**FIG 6.1** Butterfly Brackets (1 Set)

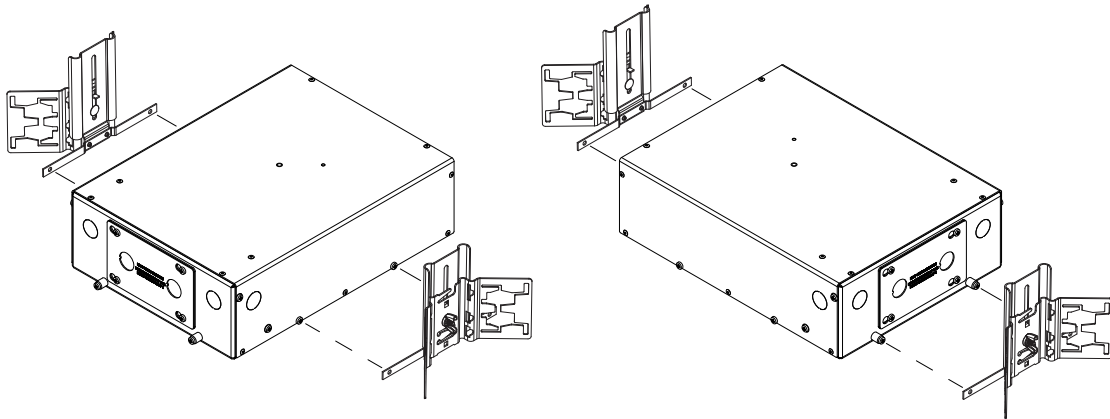













**FIG 6.2** Butterfly Bracket/Housing Position

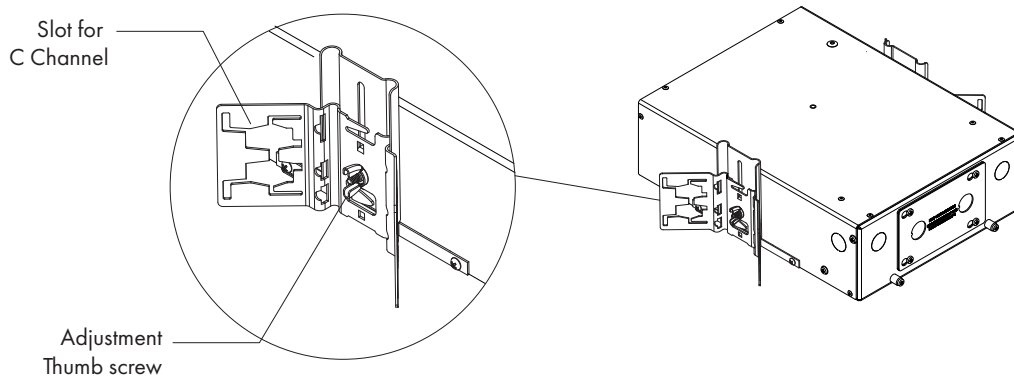

**FIG 6.3** Butterfly Bracket Adjustment















# CEILING CUTOUTS FOR PLASTER/SHEETROCK CEILINGS

Refer to 800 Series Trim Installation Instructions (92005) for Additional Details
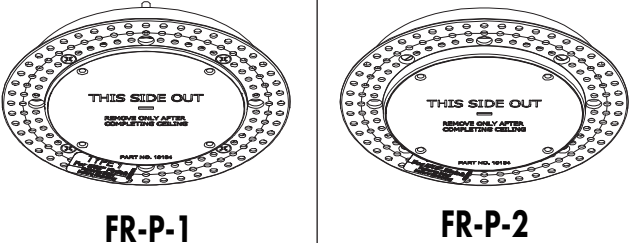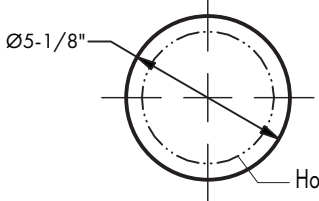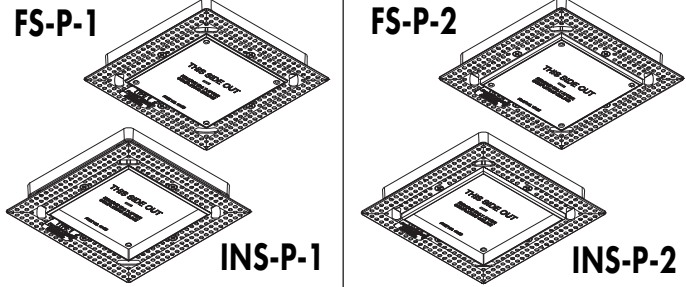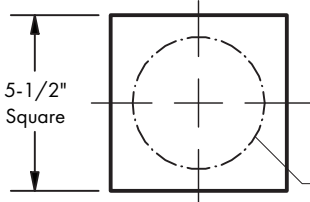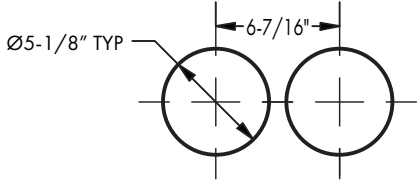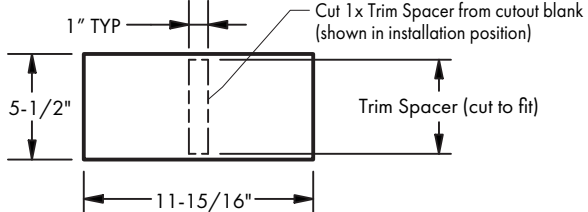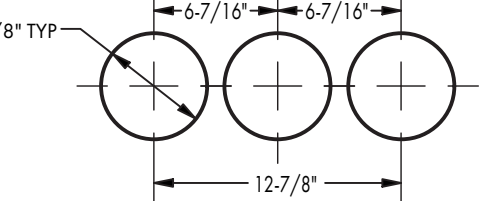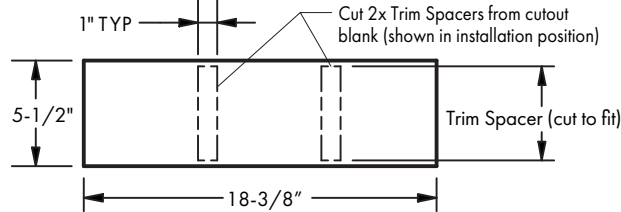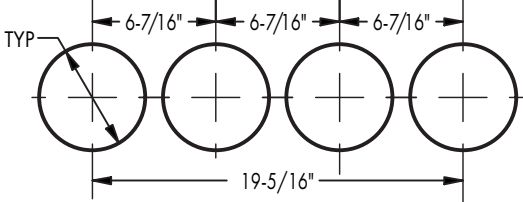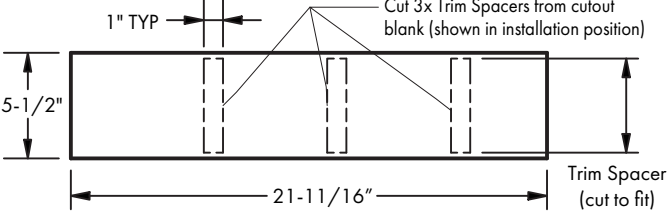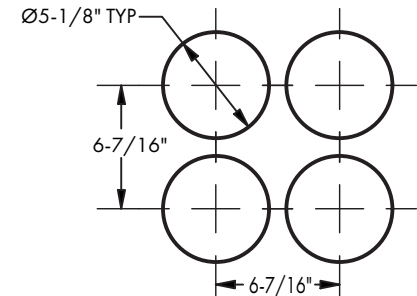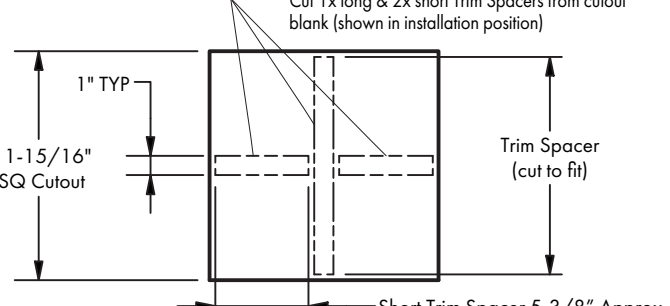
| Trim Model          | Round Trims   | Square Trims  |
|---------------------|---|---|
| 1 Lamp Housing      |  <p>FR-P-1      FR-P-2</p> <p>Round Trim Cutouts</p>  <p>Ø5-1/8"      Housing aperture</p> <p>(shown at larger scale)</p> <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>Tolerances:<br/>All Round Trim<br/>Cutouts ± 1/16"<br/>CTR-CTR ± 1/32"</p> </div> |  <p>FS-P-1      FS-P-2</p> <p>INS-P-1      INS-P-2</p> <p>Square Trim Cutouts &amp; Spacers</p>  <p>5-1/2" Square      Housing aperture</p> <p>(shown at larger scale)</p> <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>Tolerances:<br/>All Square Trim<br/>Cutouts +1/8"</p> </div> |
| 2 Lamp Housing      |  <p>Ø5-1/8" TYP      6-7/16"</p>  |  <p>1" TYP      Cut 1x Trim Spacer from cutout blank (shown in installation position)</p> <p>5-1/2"      Trim Spacer (cut to fit)</p> <p>11-15/16"</p>   |
| 3 Lamp Housing      |  <p>Ø5-1/8" TYP      6-7/16"      6-7/16"</p> <p>12-7/8"</p>   |  <p>1" TYP      Cut 2x Trim Spacers from cutout blank (shown in installation position)</p> <p>5-1/2"      Trim Spacer (cut to fit)</p> <p>18-3/8"</p>   |
| 4 Lamp Housing      |  <p>Ø5-1/8" TYP      6-7/16"      6-7/16"      6-7/16"</p> <p>19-5/16"</p>   |  <p>1" TYP      Cut 3x Trim Spacers from cutout blank (shown in installation position)</p> <p>5-1/2"      Trim Spacer (cut to fit)</p> <p>21-11/16"</p>   |
| 4 Lamp Quad Housing |  <p>Ø5-1/8" TYP      6-7/16"      6-7/16"</p>  |  <p>1" TYP      Cut 1x long &amp; 2x short Trim Spacers from cutout blank (shown in installation position)</p> <p>11-15/16" SQ Cutout      Trim Spacer (cut to fit)</p> <p>Short Trim Spacer 5-3/8" Approx.</p>   |

# CEILING CUTOUTS FOR WOOD/STONE/ACOUSTIC TILE CEILINGS

Refer to 800 Series Trim Installation Instructions (92005) for Additional Details
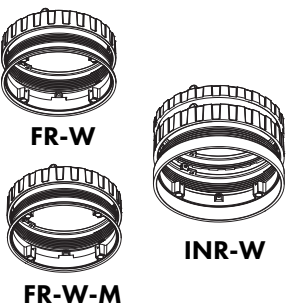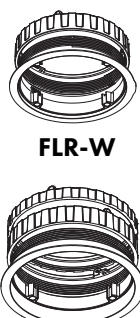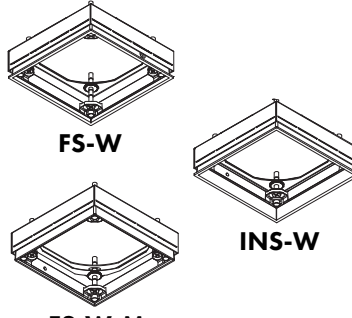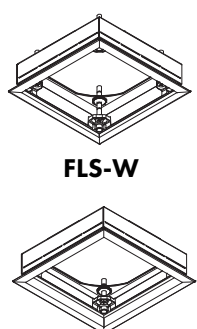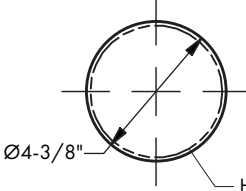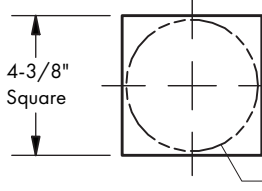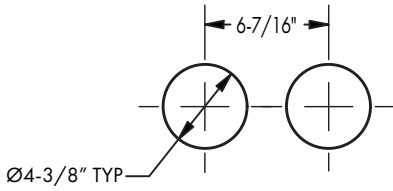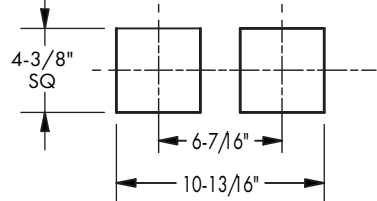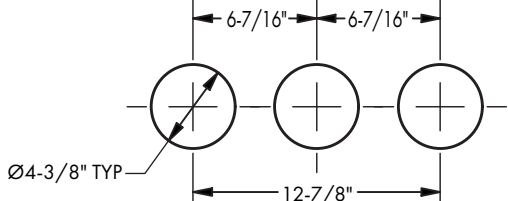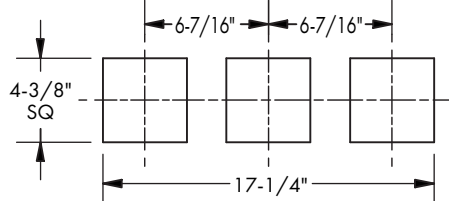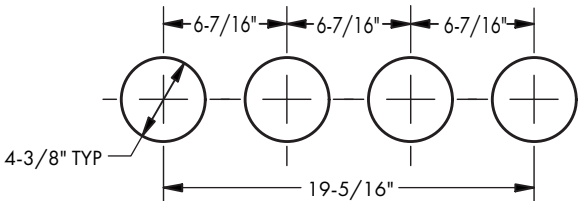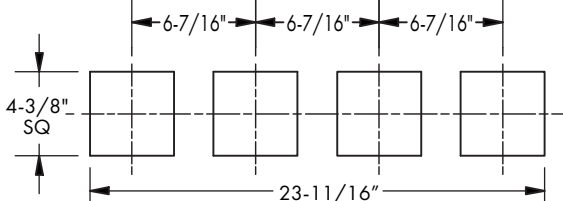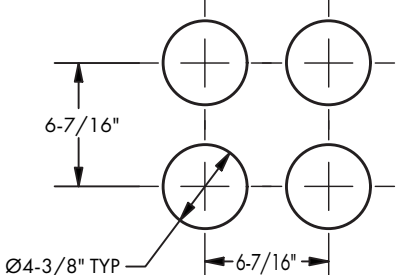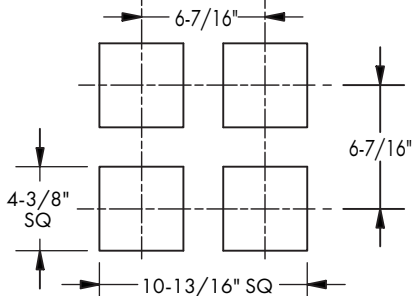
|                     | Round Trims   |   | Square Trims   |  |
|---------------------|---|---|--|--|
|                     | Non-Flanged   | Flanged   | Non-Flanged  | Flanged  |
| Trim Model          |  <p><b>FR-W</b><br/><b>FR-W-M</b><br/><b>INR-W</b></p> <p><b>Important:</b> All Non-flanged cutouts to have clean, sharp edges</p> |  <p><b>FLR-W</b><br/><b>FLNR-W</b></p>   |  <p><b>FS-W</b><br/><b>FS-W-M</b><br/><b>INS-W</b></p> <p><b>Important:</b> All Non-flanged cutouts to have clean, sharp edges</p> |  <p><b>FLS-W</b><br/><b>FLNS-W</b></p>  |
| 1 Lamp Housing      |  <p>Ø4-3/8"<br/>Housing aperture<br/>(shown at larger scale)</p>   | <p>All Round Cutout Tolerances:</p> <p><b>FR-W, FR-W-M</b> ± 1/32"<br/><b>INR-W</b> ± 1/32"<br/><b>FLR-W</b> +1/8" / -1/32"<br/><b>FLNR-W</b> +1/8" / -1/32"<br/>CTR to CTR ± 1/32"</p> |  <p>4-3/8"<br/>Square<br/>Housing aperture<br/>(shown at larger scale)</p>   | <p>All Square Cutout Tolerances:</p> <p><b>FS-W, FS-W-M</b> ± 1/32"<br/><b>INS-W</b> ± 1/32"<br/><b>FLS-W</b> +1/8" / -1/16"<br/><b>FLNS-W</b> +1/8" / -1/16"<br/>CTR to CTR ± 1/32"</p> |
| 2 Lamp Housing      |  <p>Ø4-3/8" TYP<br/>6-7/16"</p>   |  <p>4-3/8" SQ<br/>6-7/16"<br/>10-13/16"</p>  |  |  |
| 3 Lamp Housing      |  <p>Ø4-3/8" TYP<br/>6-7/16"<br/>12-7/8"</p>  |  <p>4-3/8" SQ<br/>6-7/16"<br/>17-1/4"</p>   |  |  |
| 4 Lamp Housing      |  <p>4-3/8" TYP<br/>6-7/16"<br/>19-5/16"</p>  |  <p>4-3/8" SQ<br/>6-7/16"<br/>23-11/16"</p>   |  |  |
| 4 Lamp Quad Housing |  <p>Ø4-3/8" TYP<br/>6-7/16"</p>  |  <p>4-3/8" SQ<br/>6-7/16"<br/>10-13/16" SQ</p>  |  |  |

# LAMP MODULE J2 & J2S INSTALLATION / ADJUSTMENT / REMOVAL

**CAUTION:** Turn off power at wall switch & review all instructions on this page before proceeding.  
Always allow lamp module to cool before servicing.

**Installation** (not required if pre-installed into housing):

**Step 1** Before installing Lamp Module, make sure correct LED Power Supply Module is installed & Lock Shaft is in unlocked position - **FIG 9.1 & 9.3.**

**Step 2** Insert Lamp Module into housing as shown then adjust to 45° position to expose Fastener. Secure to Housing Center Stud - **FIG 9.2 & 9.3.**


**Step 4** Plug Wire Connector from Lamp Module into Power Supply Module connector. Push wire up inside housing to avoid interference during adjustment - **FIG 9.2.**

**Adjustment:** Adjust desired horizontal position & vertical aiming angle as shown in **FIG 9.4.**


**Removal:** To remove lamp module follow steps above in reverse order.

**Replacement:** Contact Number Eight Lighting for replacement Lamp Module.


**Optional Accessories:** Unscrew Lamp Ring to add/ remove accessories - **FIG 9.2.**

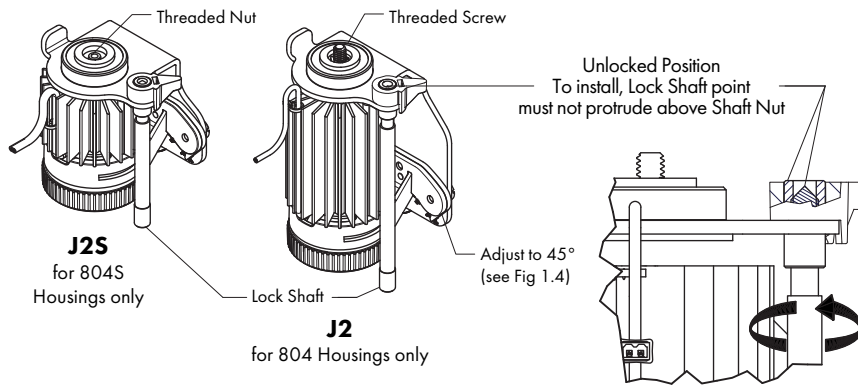

**FIG 9.1** Preparing Lamp Module J2 & J2S for installation

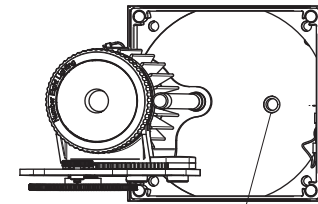


Tighten Lamp Module Fastener  
to Housing Center Nut or Stud

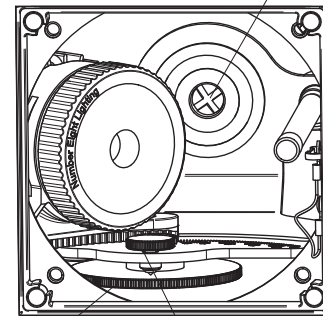


To expose lamp module fastener, adjust vertical axis  
angle to 45 deg using Gear Knob ( See Fig 1.4)

**FIG 9.3** Securing Lamp Module to Housing

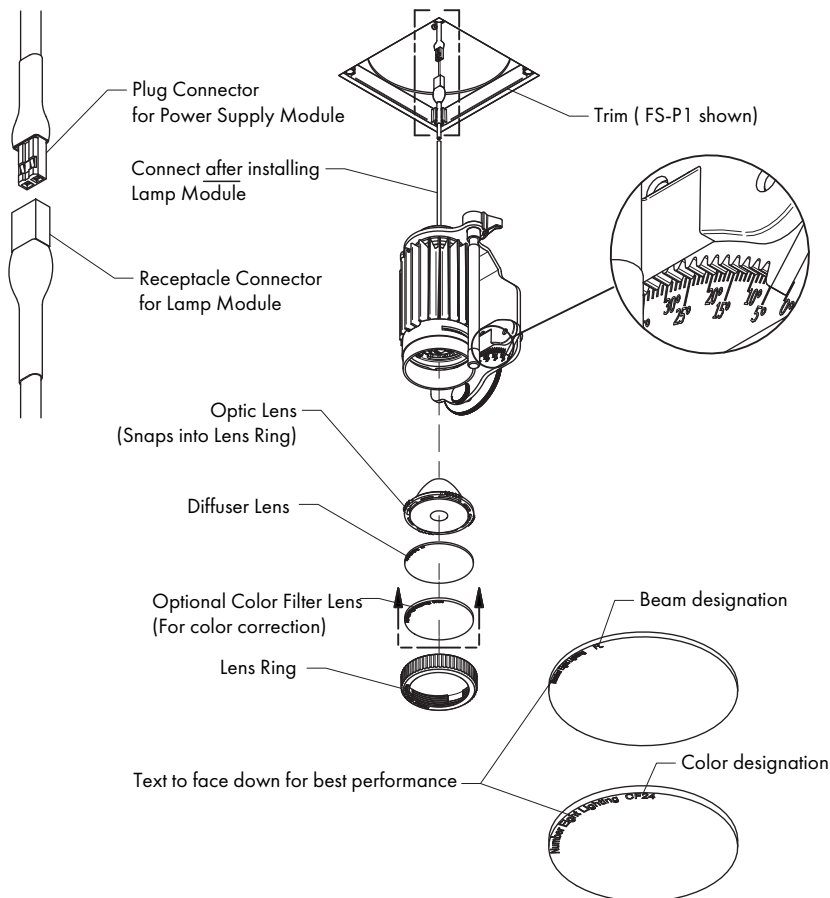

**FIG 9.2** Installing Lamp Module J2 & J2S

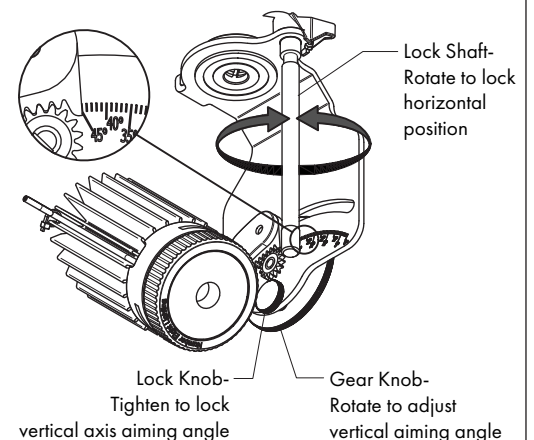

**FIG 9.4** Aiming Adjustment

# LAMP MODULE J2S-TW INSTALLATION/ADJUSTMENT/REMOVAL

**CAUTION:** ▶ Turn off power at wall switch & review all instructions on this page before proceeding.  
▶ Always allow lamp module to cool before servicing.

**Installation** (not required if pre-installed into housing):

**Step 1** Before installing Lamp Module, make sure accessories & correct LED Power Supply Module are installed & Lock Shaft is in unlocked position - **FIG 10.1 & 10.2.**

**Step 2** Insert Lamp Module into housing as shown then adjust to 45° position to expose fastener. Secure to Housing Center Stud - **FIG 10.2 & 10.3.**


**Step 3** Plug Wire Connectors from Lamp Module into Power Supply Module connectors. Push wires up inside housing to avoid interference during adjustment - **FIG 10.2.**

**Adjustment:** Adjust desired horizontal position & vertical aiming angle as shown in **FIG 10.4.**


**Removal:** To remove lamp module follow steps above in reverse order.

**Replacement:** Contact Number Eight Lighting for replacement Lamp Module.



**Optional Accessories:** Unscrew Lamp Ring to add/ remove accessories - **FIG 10.2.**

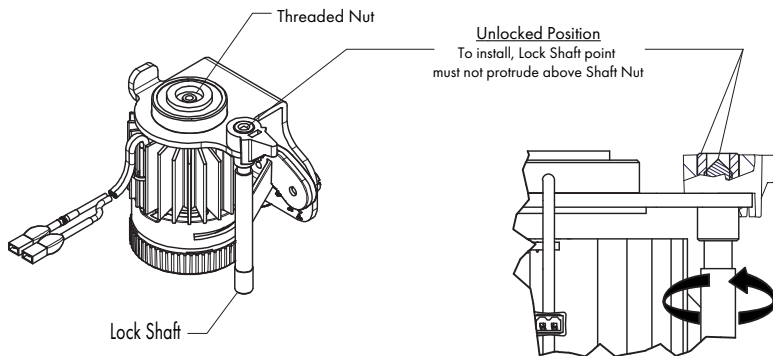

**FIG 10.1** Preparing Lamp Module J2S -TW for installation

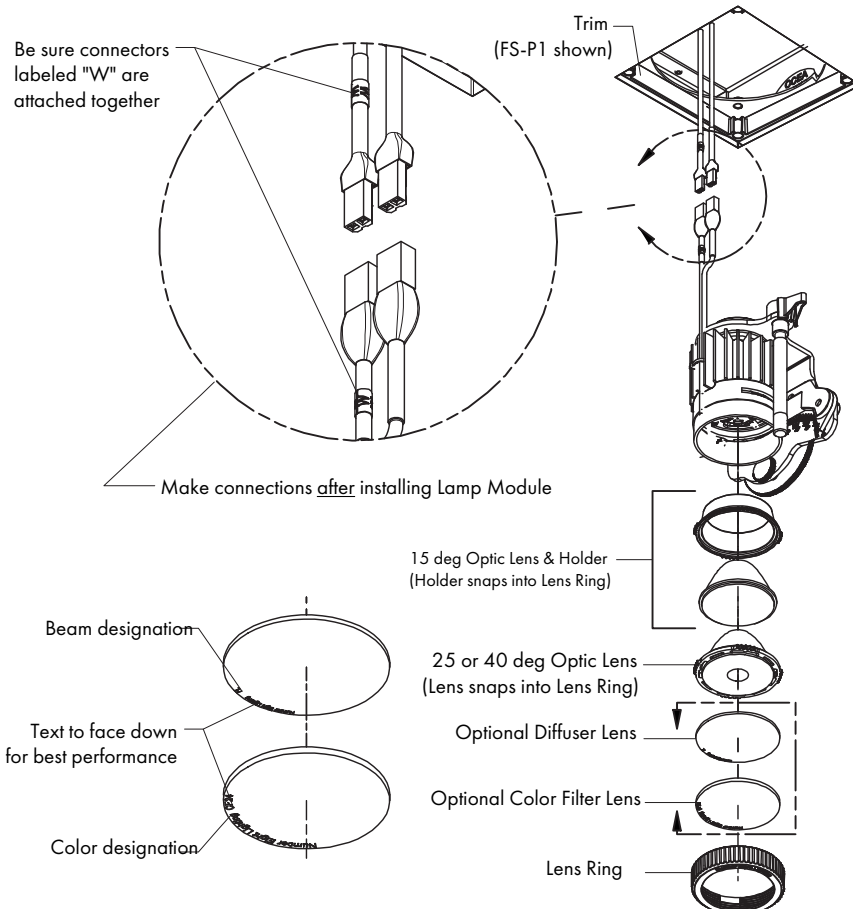


**FIG 10.2** Installing Lamp Module J2S-TW

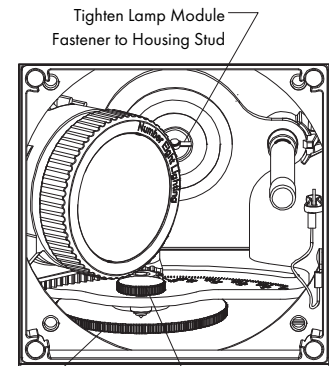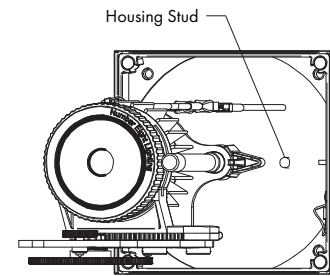

To expose lamp module fastener, adjust vertical axis angle to 45 deg using Gear Knob ( See Fig 10.4)

**FIG 10.3** Securing Lamp Module to Housing

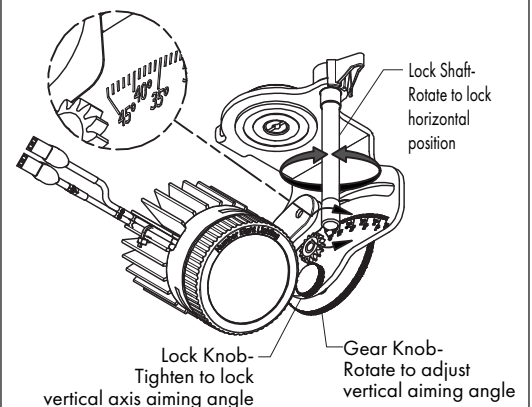

**FIG 10.4** Aiming Adjustment

# WW-8 WALL WASH TRIM PLATE - INSTALLATION INSTRUCTIONS

## WW-8 Trim Plate Models for 800 Series Housings


**Important:** WW-8 Trim Plates can only be used with J2 & J2S Lamp Modules. For optimal performance use 40° optic with HI, HI-3, WD, WD-2, WD-4 or TW LED. Use 10° optic and FL lens with HI-2 LED.

**STEP 1** Unlock & adjust J2 or J2S Lamp Module to 20° vertical aiming angle for optimal wall wash performance - **FIG 11.1**.


**STEP 2** Unlock & adjust horizontal position to aim light towards wall surface to be illuminated - **FIG 11.2**.

**STEP 3** Orient & install Wall Wash Trim Plate into Trim as shown - **FIG 11.3**.


**Note:** Magnets will permit Trim Plates to only be installed in 4 horizontal orientations.

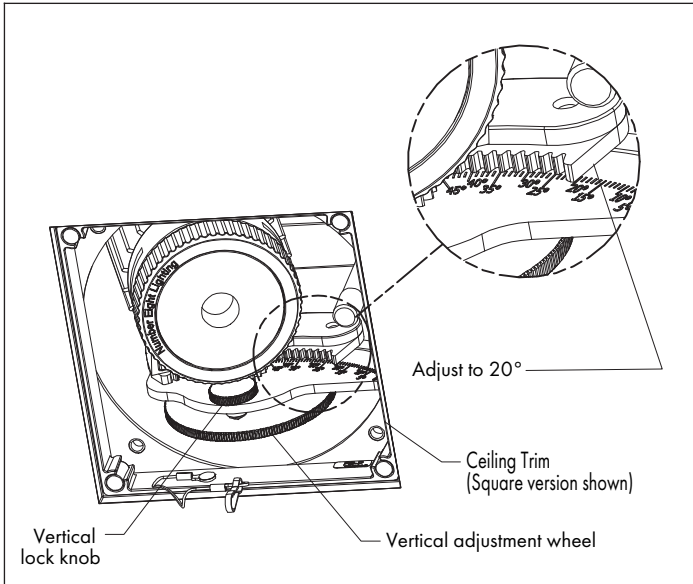

**FIG 11.1** Adjust Vertical Aiming Angle

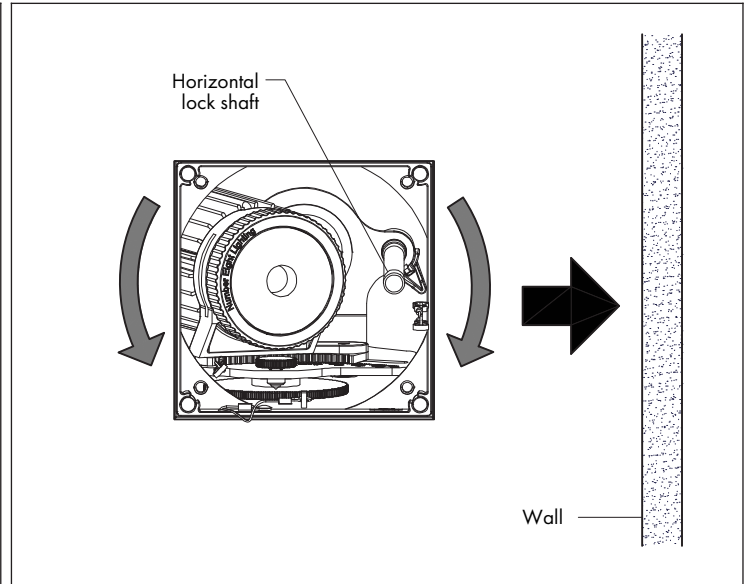

**FIG 11.2** Adjust Horizontal position

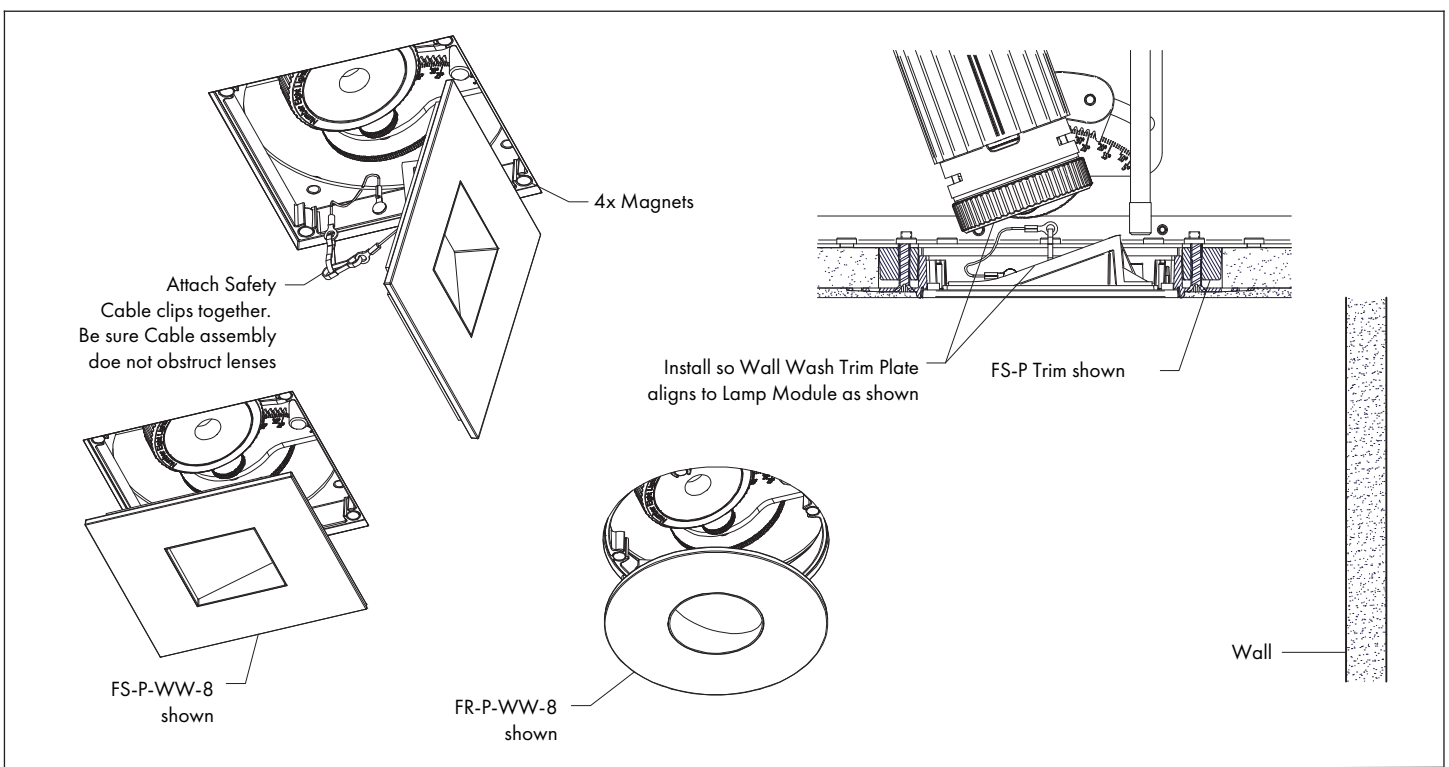

**FIG 11.3** Install Wall Wash Trim Plate

# LAMP MODULE K2 & K2S INSTALLATION/ADJUSTMENT/REMOVAL

**CAUTION:** ▶ Turn off power at wall switch & review all instructions on this page before proceeding.  
▶ Always allow lamp module to cool before servicing.

**Installation** (not required if pre-installed into housing):

**STEP 1** Before installing Lamp Module, make sure the LED Power Supply Module is installed (shown on page 1.5).



**STEP 2** Pull Power Module Connector through opening & insert Lamp Module into housing as shown. Secure Lamp Module to Housing Nut or Stud & hand tighten - **FIG 12.1 & 12.2.**

**STEP 3** Plug Wire Connector from Lamp Module into Power Supply Module connector. Push wire up inside housing to avoid interference with LED - **FIG 12.2.**


**Removal:** To remove lamp module follow steps above in reverse order.

**Replacement:** Contact Number Eight Lighting for replacement Lamp Module.

**Optional Accessories:** Unscrew Lamp Ring to add/remove accessories- **FIG 12.1.**

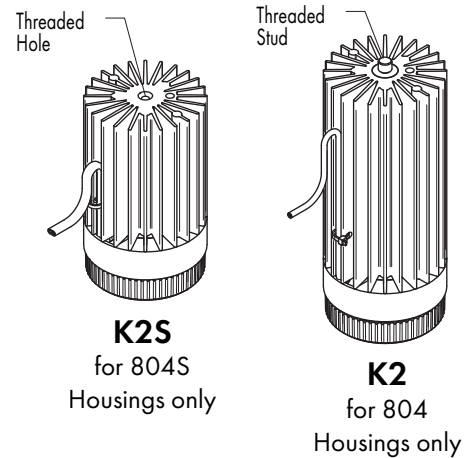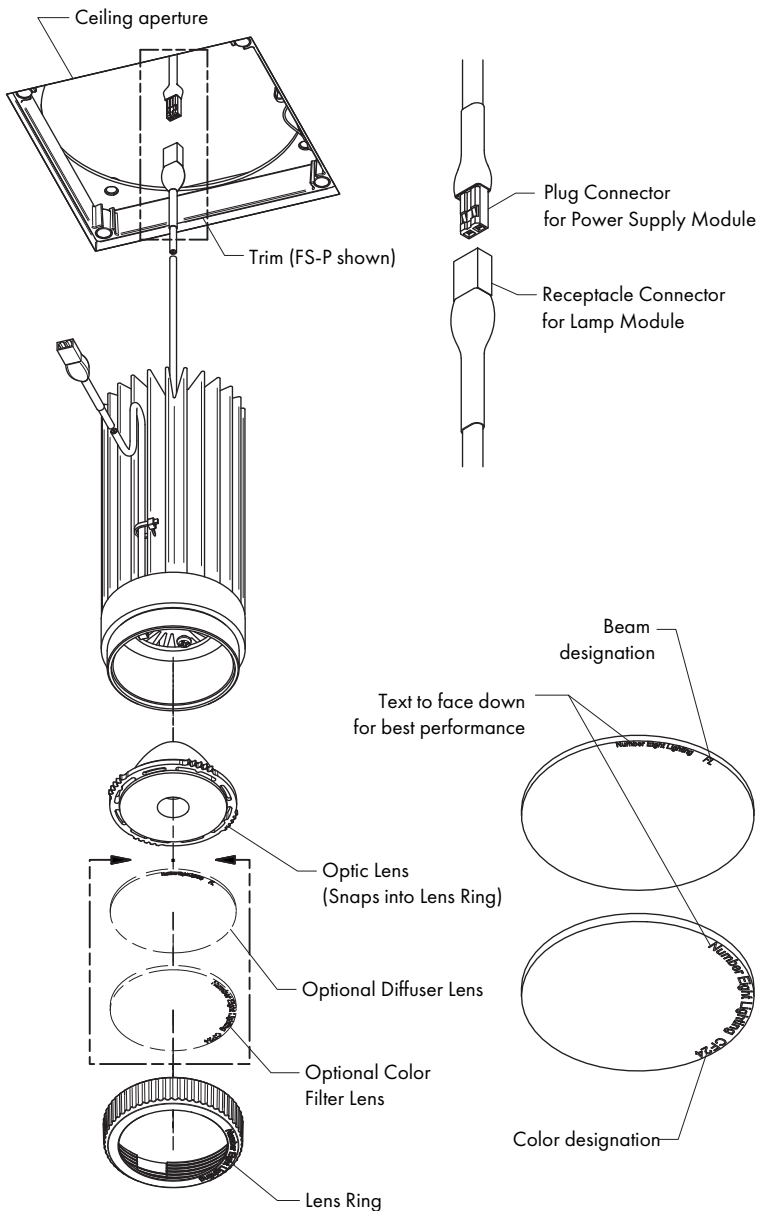


Housing Nut (804 Housing) or Stud (804S Housing)

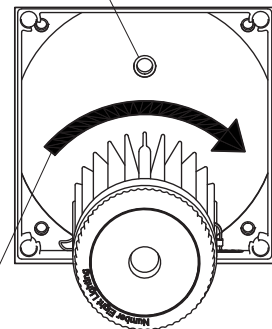

Tighten Lamp Module to Housing Nut or stud.



**Note:** If LED fails to light check if connectors are plugged together as shown.

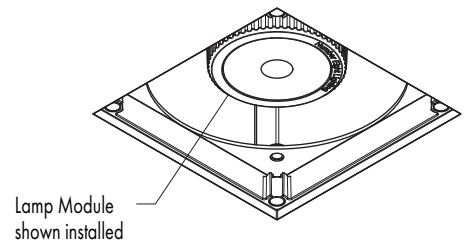

**FIG 12.1** Installing Lamp Module K2 / K2S & Accessories

**FIG 12.2** Securing Lamp Module K2 & K2S to Housing

# LAMP MODULE M2 & M2S INSTALLATION / ADJUSTMENT / REMOVAL

**CAUTION:** ▶ Turn off power at wall switch & review all instructions on this page before proceeding.  
▶ Always allow lamp module to cool before servicing.

## Installation:

**STEP 1** Before installing Lamp Module M2 or M2S, make sure LED Power Supply Module is installed (shown on page 14).

**Note:** For use of M2 & M2S with Sloped Ceilings Only-See recommended Housing installation orientation - **FIG 13.1**.

**STEP 2** Adjust vertical to 90° position as shown in **FIG 13.3**. Note: angle adjustment is limited on ceilings over 5/8" thick & when Mirror Reflector is aligned facing narrow sides of Housing.

**STEP 3** Plug Wire Connector from Lamp Module into Power Supply Module Connector. Push wire up inside Housing to avoid interference during installation - **FIG 13.4**.


**STEP 4** Choose general aiming position desired. Attach Safety Cable from Trim Cable Clip to Lamp Module before inserting Lamp Module into Housing aperture. Seat Trim Plate into Trim.

**Note:** Horizontal & vertical aiming position adjustment is lockable using Lock Knobs. General aiming position is easily changed by pulling Lamp Module out slightly & rotating into one of 4 positions - **FIG 13.2 & 13.3**.


**Removal:** To remove Lamp Module follow steps above in reverse order.

**Replacement:** Contact Number Eight Lighting for replacement LED Engine Subassy. Remove Lamp Module & unscrew LED Engine Subassy for replacement.


**Optional Accessories:** Unscrew LED Engine Subassy to add/remove Lens accessories - **FIG 13.2**.

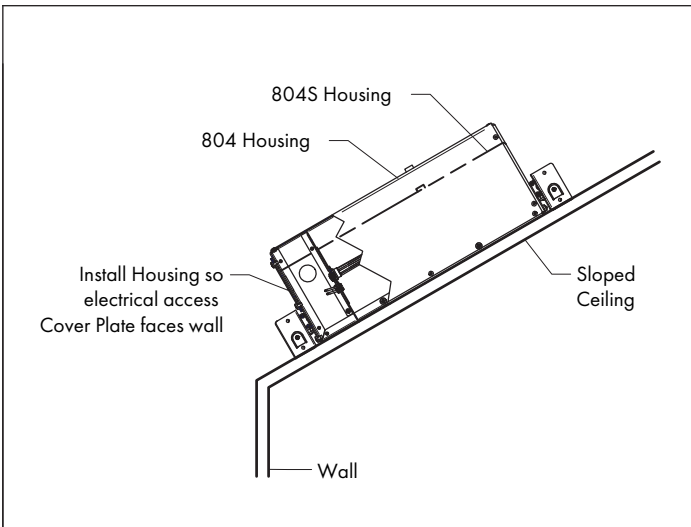


**FIG 13.1** Recommended Housing Orientation for Sloped Ceiling

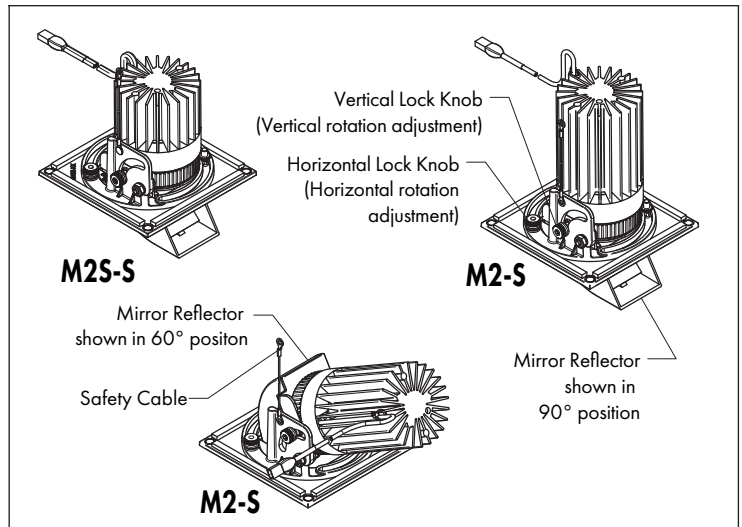

**FIG 13.3** Lamp Module Adjustment

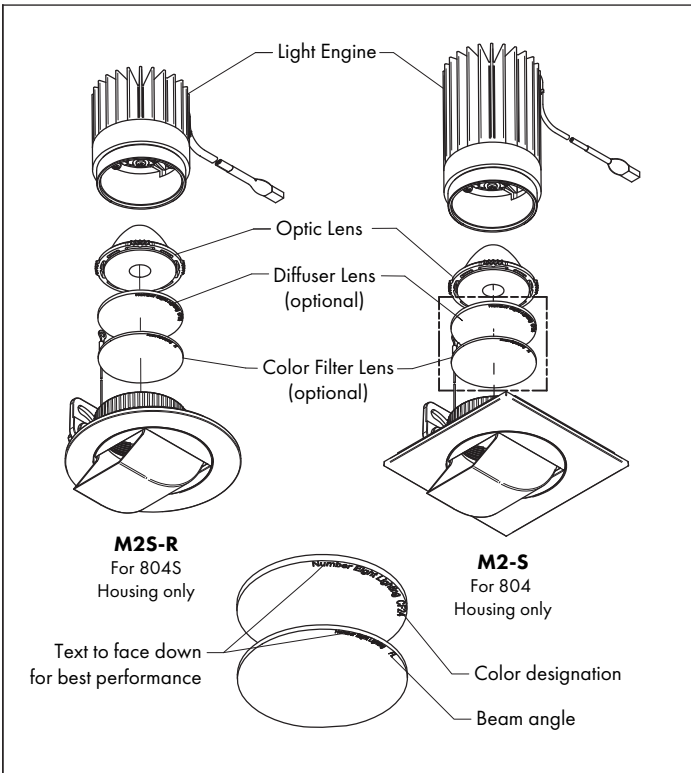

**FIG 13.2** Installing Lamp Module Accessories

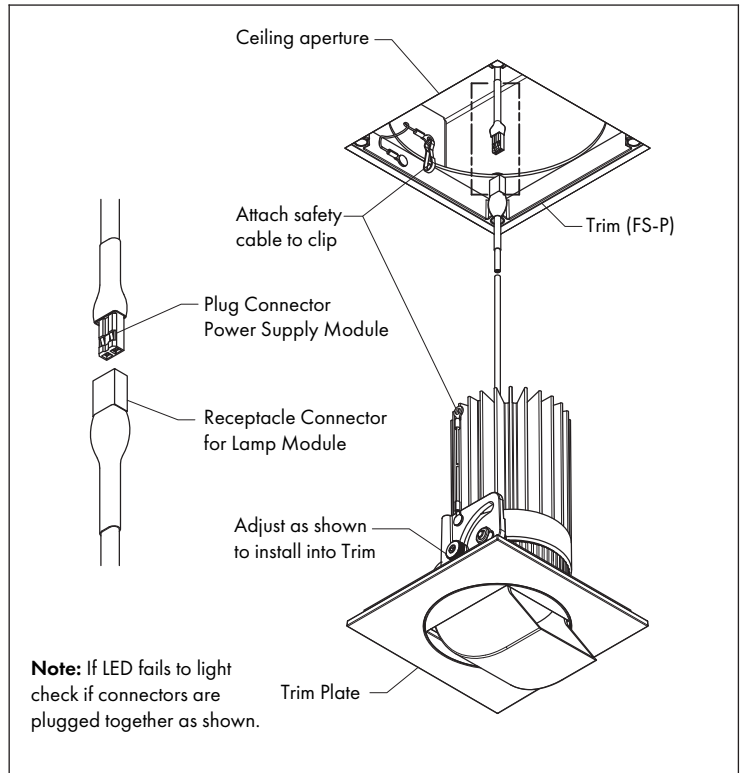

**Note:** If LED fails to light check if connectors are plugged together as shown.

**FIG 13.4** Securing Lamp Module to Housing & Trim

# LED POWER SUPPLY MODULE REMOVAL / REPLACEMENT

**CAUTION:** ▶ Turn off power at wall switch & review all instructions on this page before proceeding.  
▶ Always allow lamp module to cool before servicing.

## To remove LED Power Supply Modules

**STEP 1** Remove Lamp Module (refer to Pages 9-13).


**STEP 2** Unscrew & remove Thumb Knob inside Housing as shown. Tilt Power Supply Module to disengage offset tab from housing as shown - **FIG 14.1**.

**STEP 3** Pull Power Supply Module away from threaded stud and pull wires & Power Connectors out of the Junction Box - **FIG 14.2**.


**STEP 4** Disconnect Power Supply Connectors. For models with 0-10 drivers, also disconnect purple & gray wires - **FIG 14.2**.

**STEP 5** Pull Power Supply Module through aperture - **FIG 14.3**.


**For Replacement:** Replace all parts in steps above in reverse order. Push all wires into wiring compartment & replace Power Supply Module as shown in **FIG 14.4**.

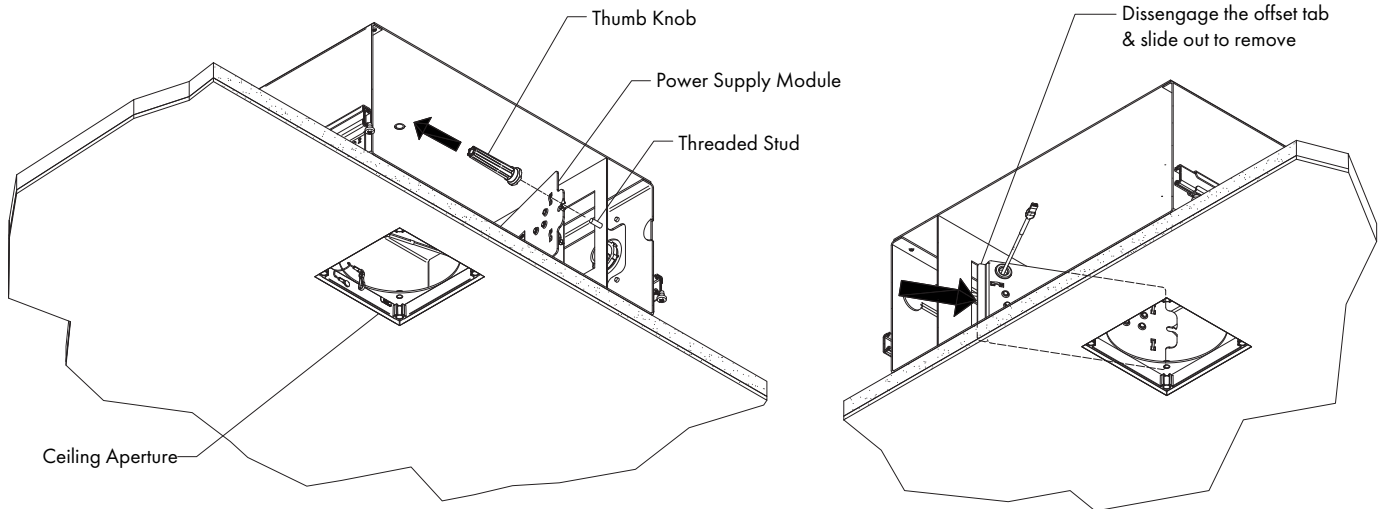


**FIG 14.1** Remove Thumb Knob & Disengage Power Supply Module (Model 804 shown)

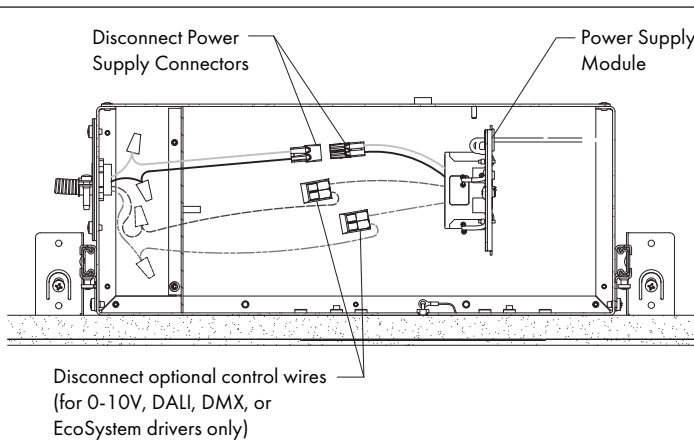

**FIG 14.2** Remove Power Supply Module & disconnect wires

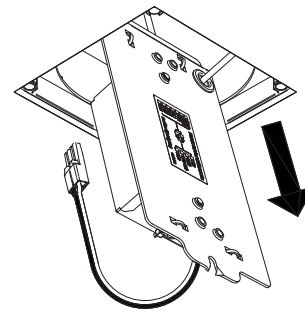

**FIG 14.3** Pass Power Supply Module Through Aperture

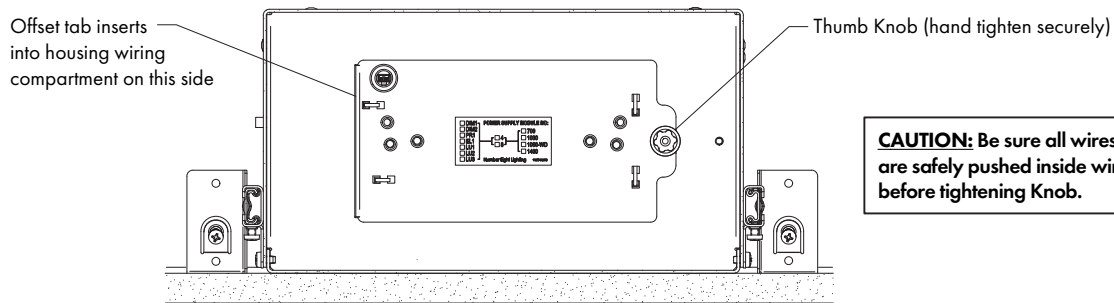

**CAUTION:** Be sure all wires & connectors are safely pushed inside wiring compartment before tightening Knob.

**FIG 14.4** Replace Power Supply Module & Secure With Thumb Knob (Model 804 Housing shown)

# SINGLE LAMP WIRING INSTRUCTIONS

## For PR1 / EL1 / EL1-01 / EL2 / EL2-01 / LU2 / LU4 / DMX1 Driver Options

### CAUTION: TO AVOID RISK OF FIRE OR ELECTRIC SHOCK

Turn off power at circuit breaker or fuse panel & read instructions completely before proceeding.

Failure to follow instructions may void warranty. Save these instructions.

- Installation must be by a qualified electrician only and must conform to National Electric code and local regulations.
  - Verify correct dimming system, lamp module, power supply type, and input supply requirements.
  - Always allow LED assembly to cool before servicing.
  - Do not install where insulation or ambient temperatures will exceed maximum values noted in product specifications.
- See [www.8lighting.com](http://www.8lighting.com) for current product specifications.


### PR1 - PHASE CONTROL

**STEP 1** Loosen screws to remove cover plate & connect driver output wires using electrical connectors at wiring compartment – **FIG 15.2**.

**STEP 2** Remove required knockouts in cover plate or housing & secure suitable electrical connectors into knock outs for supply wires – **FIG 15.2**.

**STEP 3** Make wire connections & push all wires & connections completely inside wiring compartment – **FIG 15.1 & 15.2**.

**STEP 4** Replace & secure box cover plate using screws provided – **FIG 15.2**

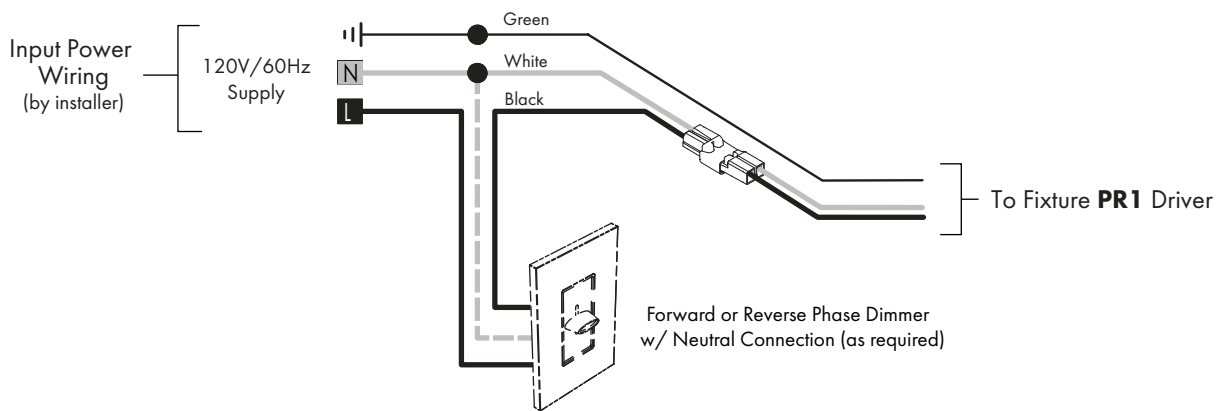


#### Phase Control Notes:

PR1 drivers are Forward or Reverse Phase dimmable.

For compatible dimmers for use with PR1 drivers see: [www.8lighting.com/resources-downloads](http://www.8lighting.com/resources-downloads)

**FIG 15.1** Wiring Diagram

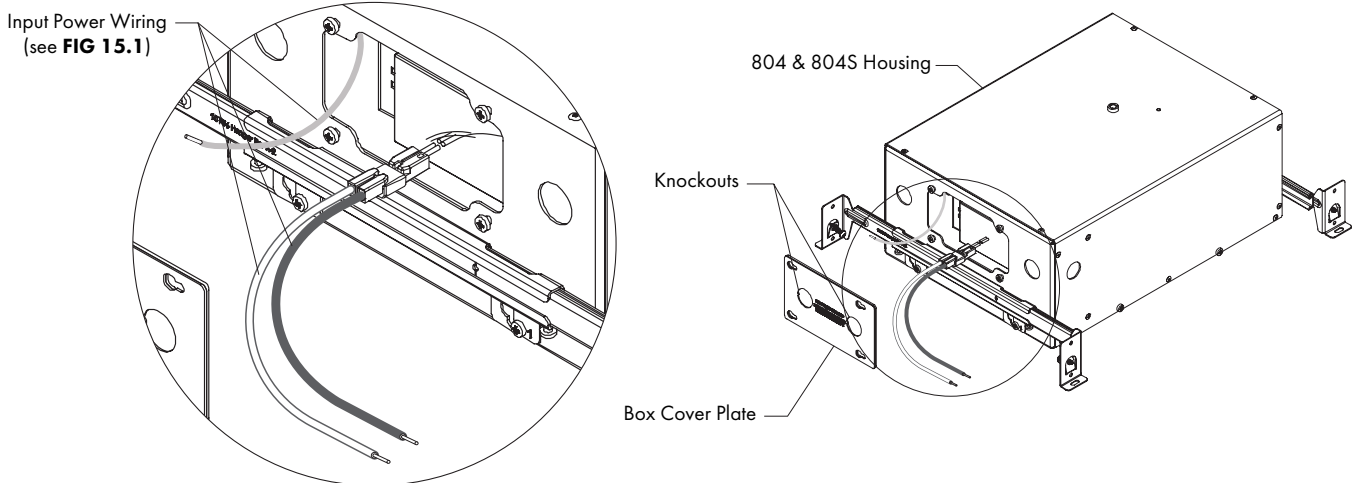


**NOTE:** For compatible dimmers for use with PR1 drivers see [www.8lighting.com/resources-downloads/](http://www.8lighting.com/resources-downloads/)

**FIG 15.2** Wire Connections

# SINGLE LAMP WIRING INSTRUCTIONS

## EL1/EL1-01 - 0-10V CONTROL


- STEP 1** Loosen screws to remove cover plate & connect driver output wires using electrical connectors at wiring compartment – **FIG 16.2**.  
**STEP 2** Remove required knockouts in cover plate or housing & secure suitable electrical connectors into knock outs for supply wires – **FIG 16.2**.  
**STEP 3** Make wire connections & push all wires & connections completely inside wiring compartment – **FIG 16.1 & 16.2**.  
**STEP 4** Replace & secure box cover plate using screws provided – **FIG 16.2**

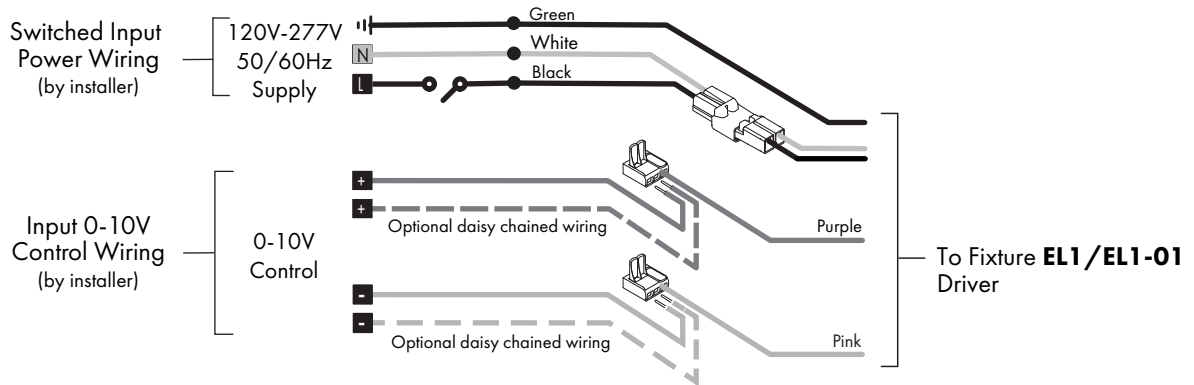

### 0-10V Control Notes:

0-10V control wiring is polarity sensitive and should be run as Class 2.  
 300' is the maximum control wiring run length to reduce EMI susceptibility and voltage drop. Voltage drop should be no greater than 0.3V.  
 For compatible dimmers for use with EL1/EL1-01 drivers see: [www.8lighting.com/resources-downloads](http://www.8lighting.com/resources-downloads).

**FIG 16.1** Wiring Diagram

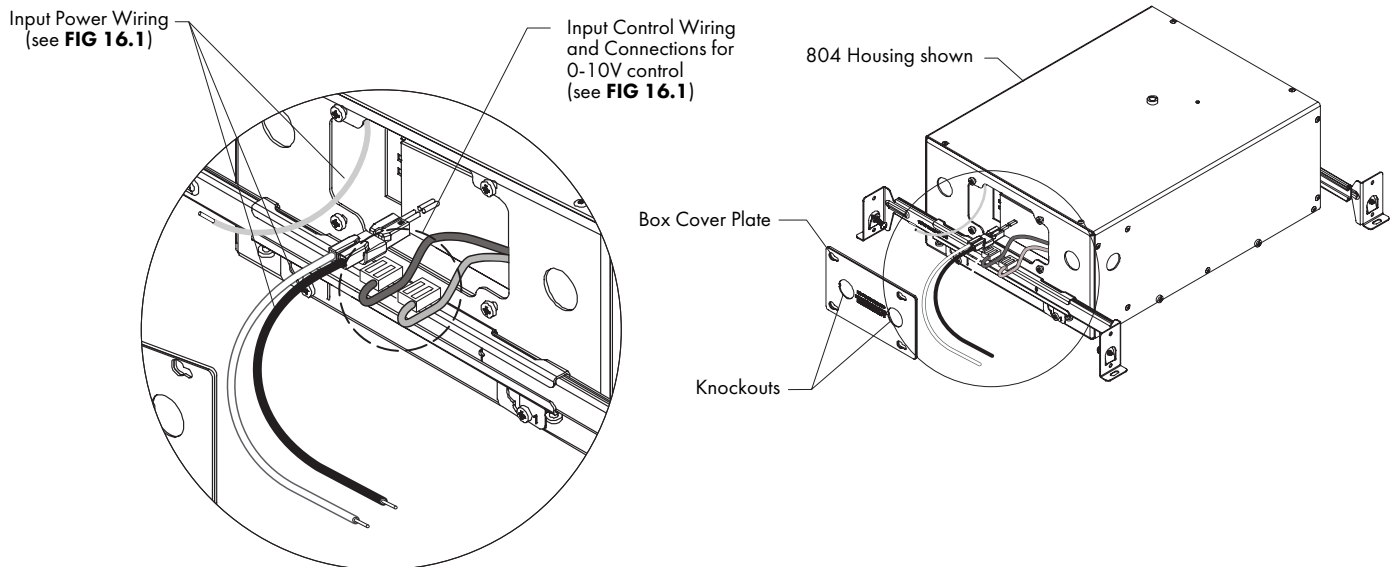


**NOTE:** For compatible dimmers for use with EL1/EL1-01 drivers see [www.8lighting.com/resources-downloads/](http://www.8lighting.com/resources-downloads/)

**FIG 16.2** Wire Connections

# SINGLE LAMP WIRING INSTRUCTIONS

## EL2/EL2-01 - DALI CONTROL

- STEP 1** Loosen screws to remove cover plate & connect driver output wires using electrical connectors at wiring compartment – **FIG 17.2.**  
**STEP 2** Remove required knockouts in cover plate or housing & secure suitable electrical connectors into knock outs for supply wires – **FIG 17.2.**  
**STEP 3** Make wire connections & push all wires & connections completely inside wiring compartment – **FIG 17.1 & 17.2.**  
**STEP 4** Replace & secure box cover plate using screws provided – **FIG 17.2**

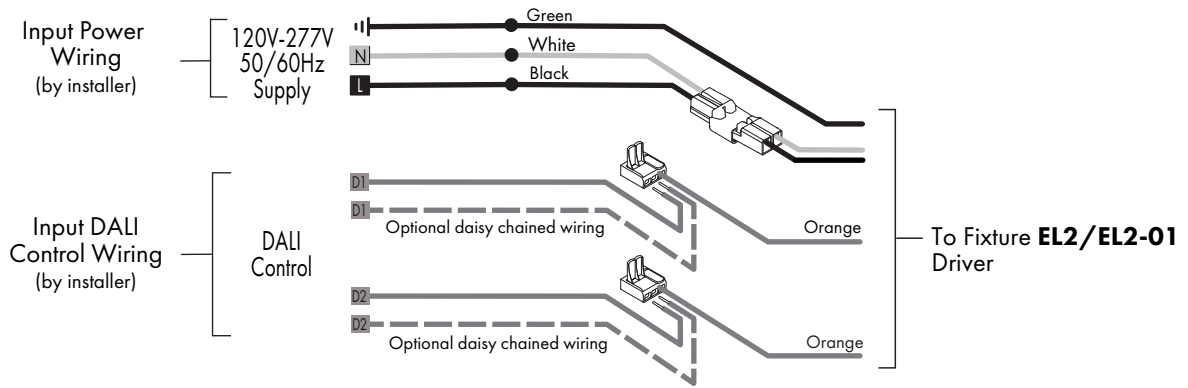


### DALI Control Notes:

DALI control wiring is not polarity sensitive and can be run as Class 1 or 2. Up to 64 **EL2/EL2-01** drivers can be daisy chained per DALI control loop. Maximum control wiring run length is 1000'.

For compatible dimmers for use with EL2/EL2-01 drivers see: [www.8lighting.com/resources-downloads](http://www.8lighting.com/resources-downloads).

**FIG 17.1** Wiring Diagram

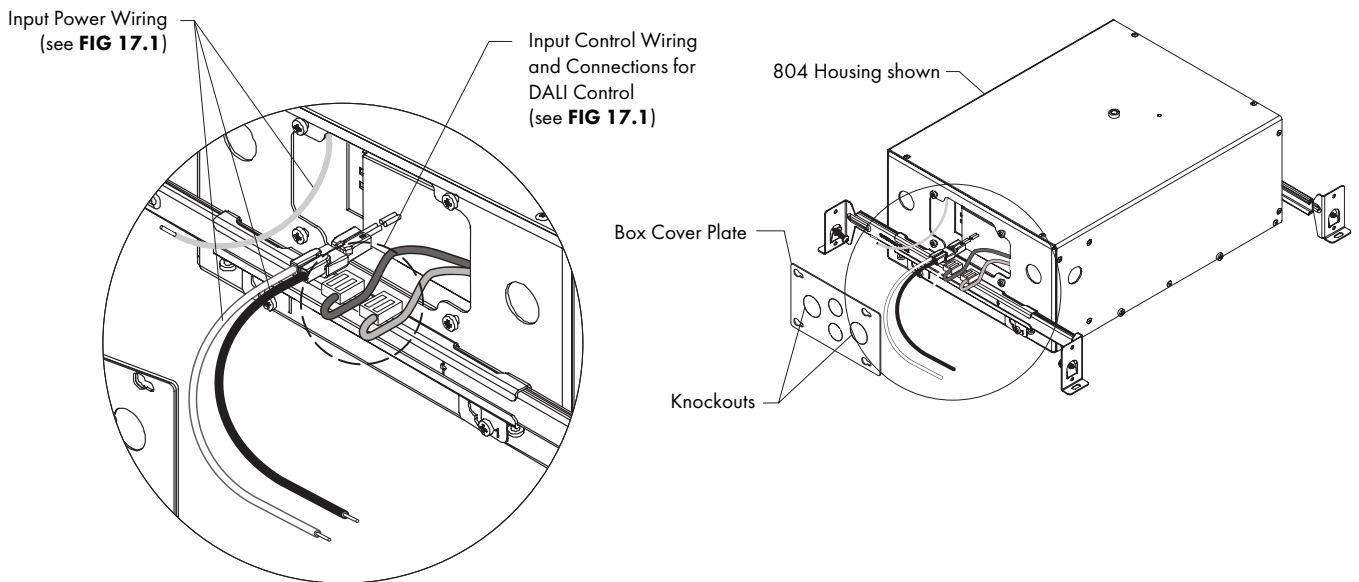

**NOTE:** For compatible dimmers for use with **EL2/EL2-01** drivers see [www.8lighting.com/resources-downloads/](http://www.8lighting.com/resources-downloads/)

**FIG 17.2** Wire Connections

# SINGLE LAMP WIRING INSTRUCTIONS


## LU2 / LU4 - LUTRON ECOSYSTEM CONTROL

**STEP 1** Loosen screws to remove cover plate & connect driver output wires using electrical connectors at wiring compartment – **FIG 18.2.**

**STEP 2** Remove required knockouts in cover plate or housing & secure suitable electrical connectors into knock outs for supply wires – **FIG 18.2.**

**STEP 3** Make wire connections & push all wires & connections completely inside wiring compartment – **FIG 18.1 & 18.2.**

**STEP 4** Replace & secure box cover plate using screws provided – **FIG 18.2**

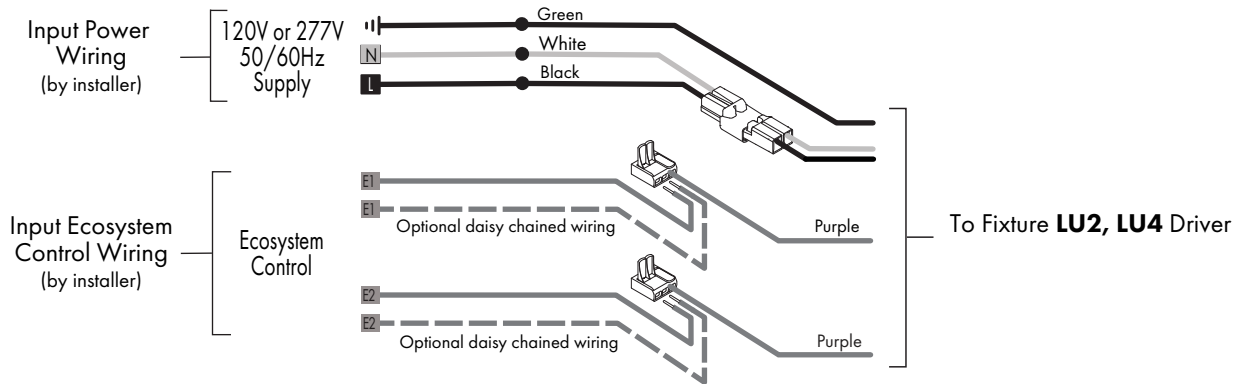


### Lutron Ecosystem Control Notes:

Up to 64 LU2 / LU4 drivers can be daisy chained per Ecosystem control loop.

Maximum control wiring run length is 1000'.

For additional information, contact LED Center of Excellence at 1.877.346.5338 or LEDs@lutron.com

**FIG 18.1** Wiring Diagram

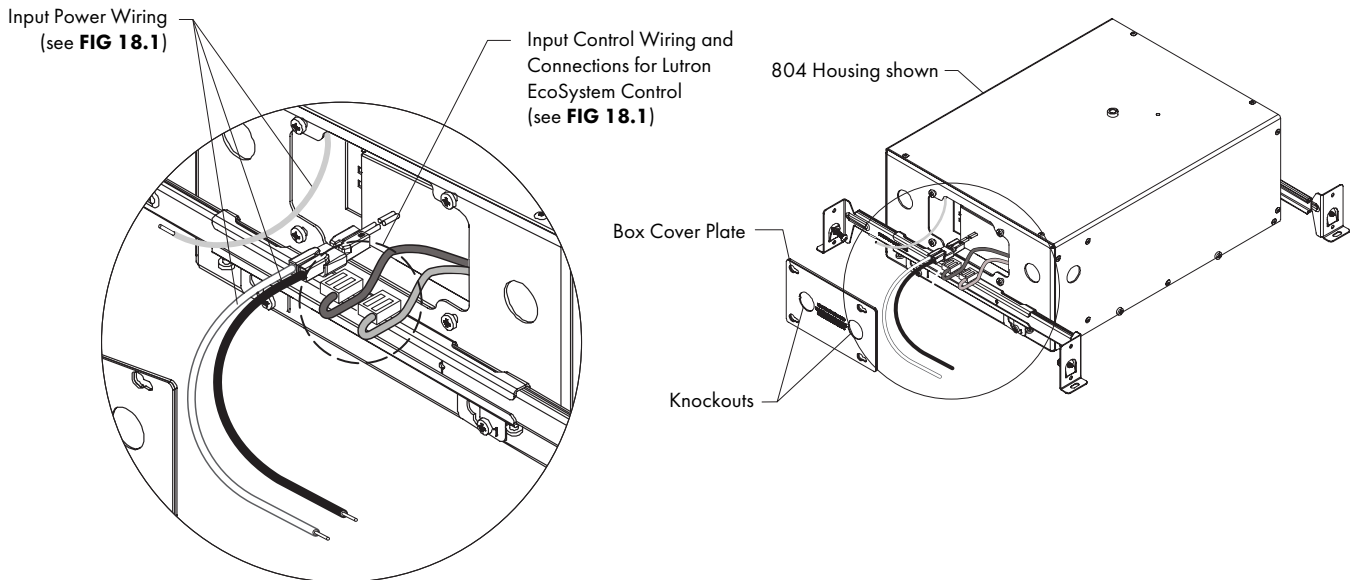


**NOTE:** For compatible dimmers for use with LU2/LU4 drivers see [www.8lighting.com/resources-downloads/](http://www.8lighting.com/resources-downloads/)

**FIG 18.2** Wire Connections

# SINGLE LAMP WIRING INSTRUCTIONS

## DMX1 - DMX CONTROL


- STEP 1** Loosen screws to remove cover plate & connect driver output wires using electrical connectors at wiring compartment – **FIG 19.2**.
- STEP 2** Remove required knockouts in cover plate or housing & secure suitable electrical connectors into knock outs for supply wires – **FIG 19.2**.
- STEP 3** Make wire connections & push all wires & connections completely inside wiring compartment – **FIG 19.1 & 19.2**.
- STEP 4** Replace & secure box cover plate using screws provided – **FIG 19.2**

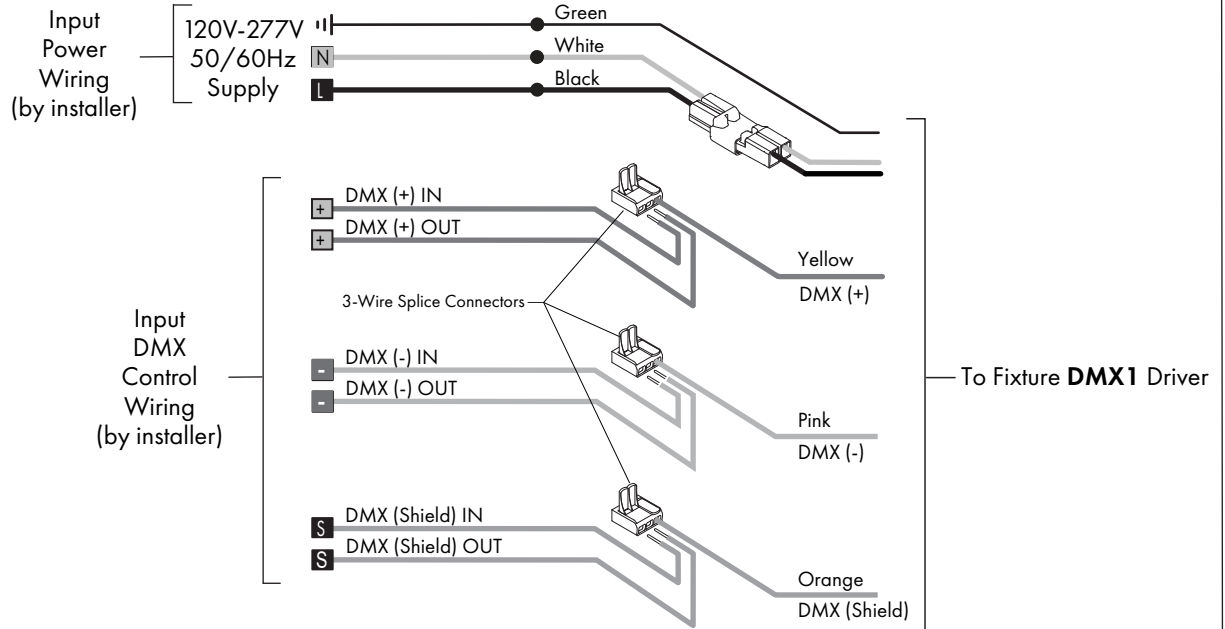

**DMX Notes:**

DMX control wiring is polarity sensitive and should be run as Class 2. Each **DMX1** driver is one "unit load". DMX runs without a repeater/signal booster should be limited to no more than 32 drivers including controller depending on the site conditions. **DMX1** drivers are RDM compatible and addressable by others in the field. Termination of the DMX runs is to be done by others per DMX512A specification. Maximum control wiring run length is 1000'. For compatible dimmers for use with **DMX1** drivers see: [www.8lighting.com/resources-downloads](http://www.8lighting.com/resources-downloads).

**FIG 19.1** Wiring Diagram

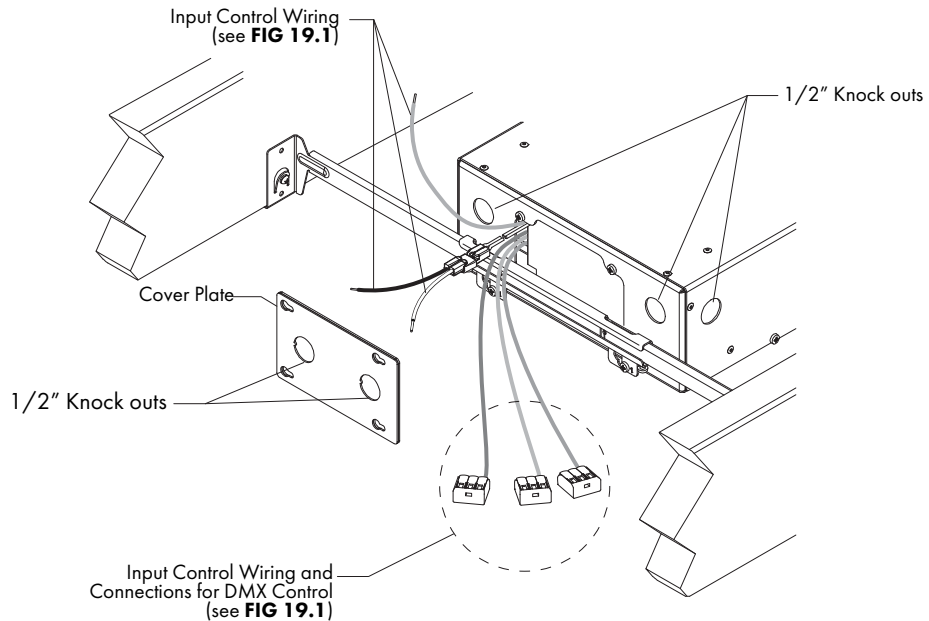

**NOTE:** For compatible dimmers for use with **DMX1** drivers see [www.8lighting.com/resources-downloads/](http://www.8lighting.com/resources-downloads/)

**FIG 19.2** Wire Connections

# SINGLE LAMP WIRING INSTRUCTIONS - 2 CHANNEL TUNABLE WHITE

For **EL3 / EL5 / DMX2** - 2 Channel Driver Options

## **⚠ CAUTION: TO AVOID RISK OF FIRE OR ELECTRIC SHOCK**

Turn off power at circuit breaker or fuse panel & read instructions completely before proceeding.

Failure to follow instructions may void warranty. Save these instructions.

- Installation must be by a qualified electrician only and must conform to National Electric code and local regulations.
  - Verify correct dimming system, lamp module, power supply type, and input supply requirements.
  - Always allow LED assembly to cool before servicing.
  - Do not install where insulation or ambient temperatures will exceed maximum values noted in product specifications.
- See [www.8lighting.com](http://www.8lighting.com) for current product specifications.


## EL3 - 2 CHANNEL DALI CONTROL

**STEP 1** Loosen screws to remove cover plate & connect driver output wires using electrical connectors at wiring compartment – **FIG 20.2**.

**STEP 2** Remove required knockouts in cover plate or housing & secure suitable electrical connectors into knock outs for supply wires – **FIG 20.2**.

**STEP 3** Make wire connections & push all wires & connections completely inside wiring compartment – **FIG 20.1 & 20.2**.

**STEP 4** Replace & secure box cover plate using screws provided – **FIG 20.2**

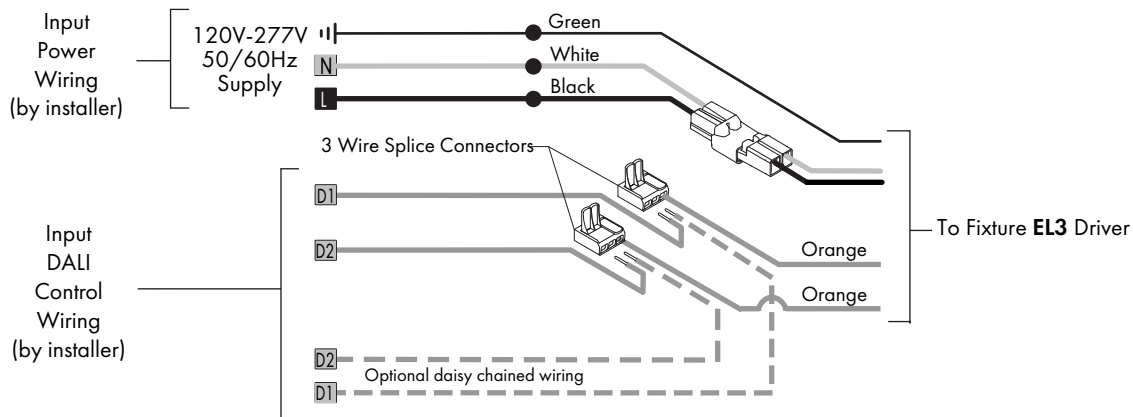


### DALI Control Notes:

DALI control wiring is not polarity sensitive and can be run as Class 1 or 2. Each **EL3** driver will be discovered with two incremented short addresses: one for CCT and one for INTENSITY.

Up to 32 **EL3** drivers can be daisy-chained per DALI control loop. Maximum control wiring run length is 1000'.

For compatible dimmers for use with **EL3** drivers see: [www.8lighting.com/resources-downloads](http://www.8lighting.com/resources-downloads).

**FIG 20.1** Wiring Diagram

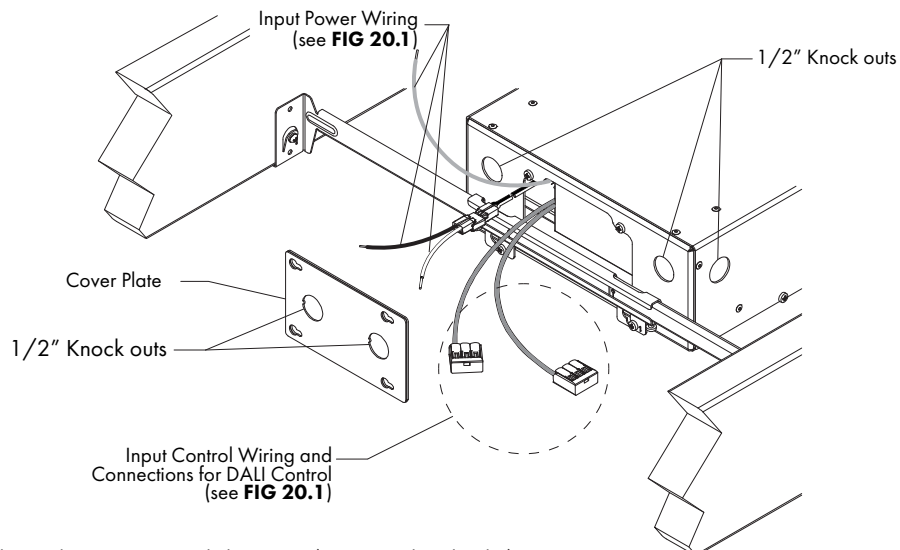


**NOTE:** For compatible dimmers for use with **EL3** drivers see [www.8lighting.com/resources-downloads/](http://www.8lighting.com/resources-downloads/)

**FIG 20.2** Wire Connections

# SINGLE LAMP WIRING INSTRUCTIONS - 2 CHANNEL TUNABLE WHITE

## EL5 2-CHANNEL 0-10V CONTROL


- STEP 1** Loosen screws to remove cover plate & connect driver output wires using electrical connectors at wiring compartment – **FIG 21.2.**
- STEP 2** Remove required knockouts in cover plate or housing & secure suitable electrical connectors into knock outs for supply wires – **FIG 21.2.**
- STEP 3** Make wire connections & push all wires & connections completely inside wiring compartment – **FIG 21.1 & 21.2.**
- STEP 4** Replace & secure box cover plate using screws provided – **FIG 21.2**

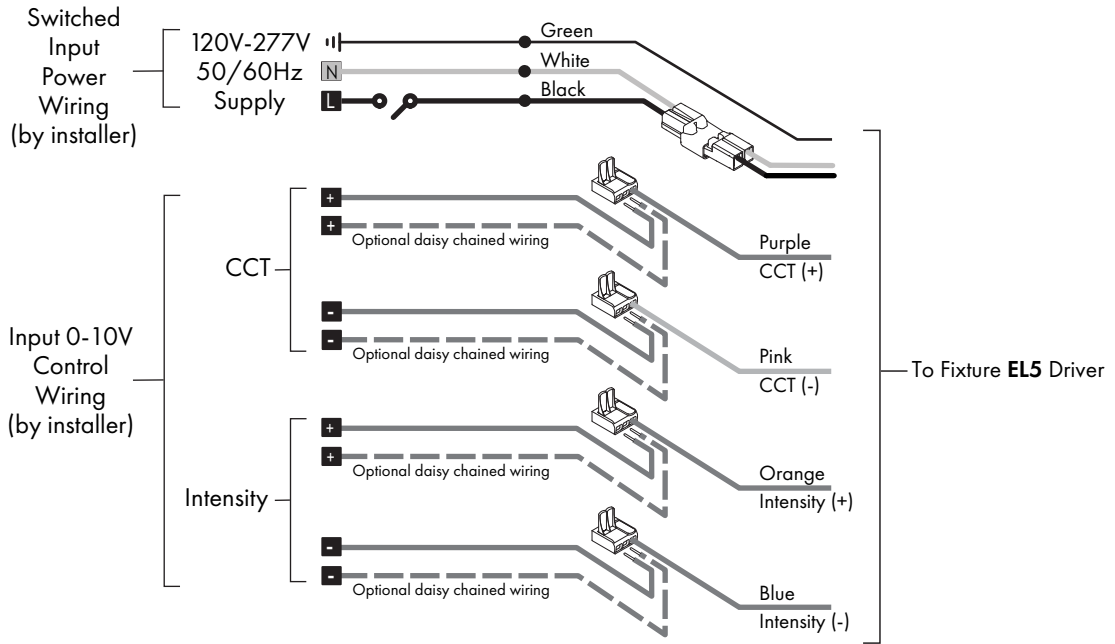

### 0-10V Control Notes:

0-10V control wiring is polarity sensitive and should be run as Class 2. Each **EL5** driver requires two pairs of Class 2 control wires: one pair for CCT and one pair for INTENSITY. 300' is the maximum control wiring run length to reduce EMI susceptibility and voltage drop. Voltage drop should be no greater than 0.3V. For compatible dimmers for use with **EL5** drivers see: [www.8lighting.com/resources-downloads](http://www.8lighting.com/resources-downloads).

**FIG 21.1** Wiring Diagram

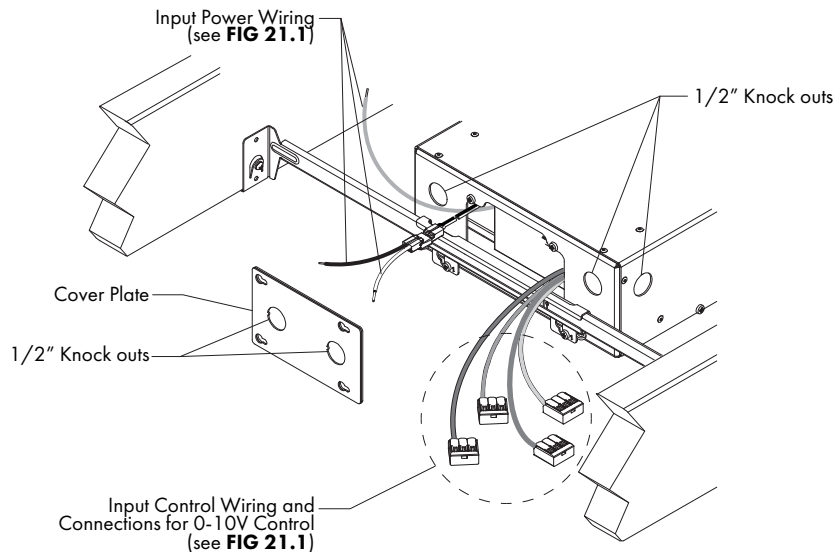


**NOTE:** For compatible dimmers for use with **EL5** drivers see [www.8lighting.com/resources-downloads/](http://www.8lighting.com/resources-downloads/)

**FIG 21.2** Wire Connections

# SINGLE LAMP WIRING INSTRUCTIONS - 2 CHANNEL TUNABLE WHITE

## DMX2 - 2 CHANNEL DMX CONTROL

- STEP 1** Loosen screws to remove cover plate & connect driver output wires using electrical connectors at wiring compartment – **FIG 22.2.**
- STEP 2** Remove required knockouts in cover plate or housing & secure suitable electrical connectors into knock outs for supply wires – **FIG 22.2.**
- STEP 3** Make wire connections & push all wires & connections completely inside wiring compartment – **FIG 22.1 & 22.2.**
- STEP 4** Replace & secure box cover plate using screws provided – **FIG 22.2**

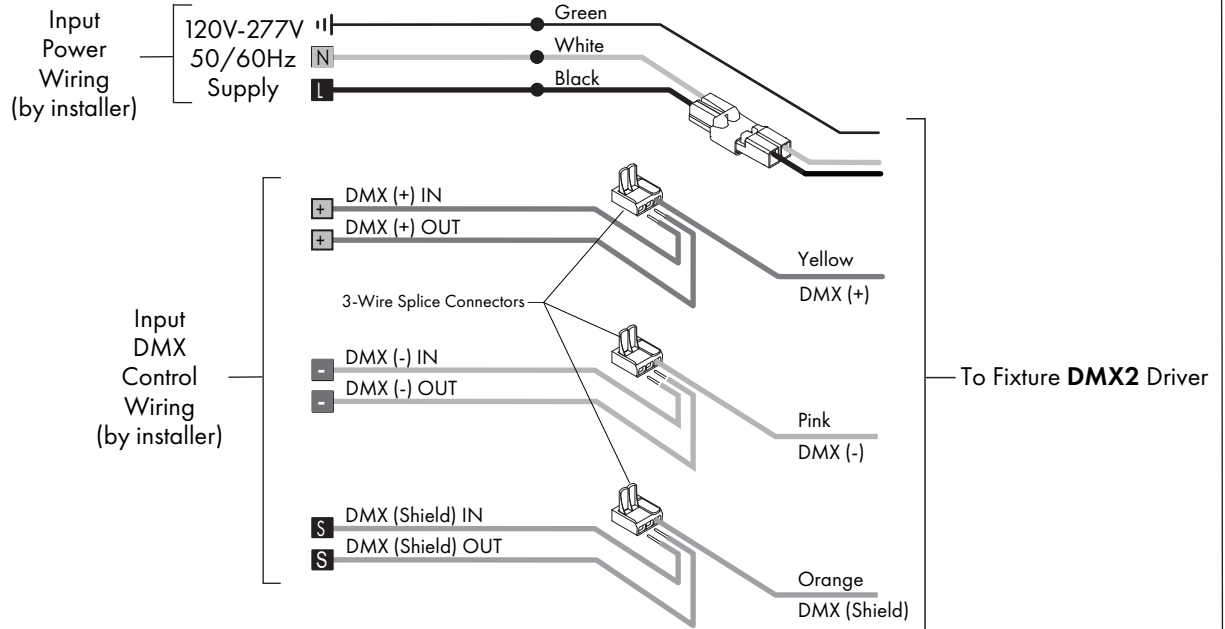


### DMX Notes:

DMX control wiring is polarity sensitive and should be run as Class 2. Each **DMX2** driver is one "unit load". DMX runs without a repeater/signal booster should be limited to no more than 32 drivers including controller depending on the site conditions. **DMX2** drivers are RDM compatible and addressable by others in the field. Termination of the DMX runs is to be done by others per DMX512A specification. Maximum control wiring run length is 1000'.

For compatible dimmers for use with **DMX2** drivers see: [www.8lighting.com/resources-downloads](http://www.8lighting.com/resources-downloads).

**FIG 22.1** Wiring Diagram

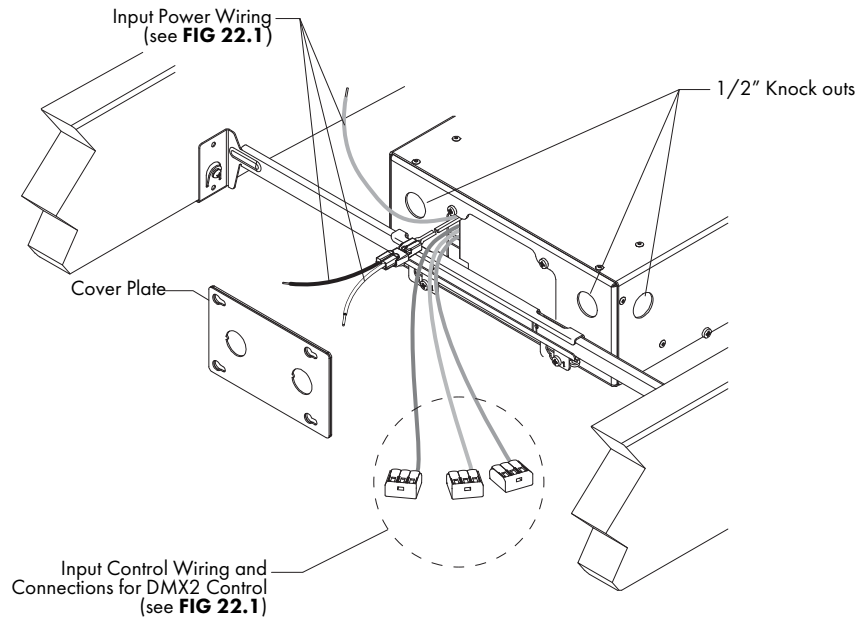

**NOTE:** For compatible dimmers for use with **DMX2** drivers see [www.8lighting.com/resources-downloads/](http://www.8lighting.com/resources-downloads/)

**FIG 22.2** Wire Connections

# MULTI-LAMP WIRING INSTRUCTIONS

For **PR1 / EL1 / EL1-01 / EL2 / EL2-01 / LU2 / LU4** Driver Options


**STEP 1** Loosen screws to remove cover plate.

**STEP 2** Remove required knockouts in cover plate or housing & secure suitable electrical connectors into knock outs for supply wires – **FIG 23.1**.

**STEP 3** Make wire connections shown below & push all wires & connections completely inside wiring compartment – **FIG 23.1 & 23.2**.

**STEP 4** Check circuit continuity using holes in terminal blocks – **FIG 23.2**.


**STEP 5** Replace & secure box cover plate using screws provided – **FIG 23.1**.

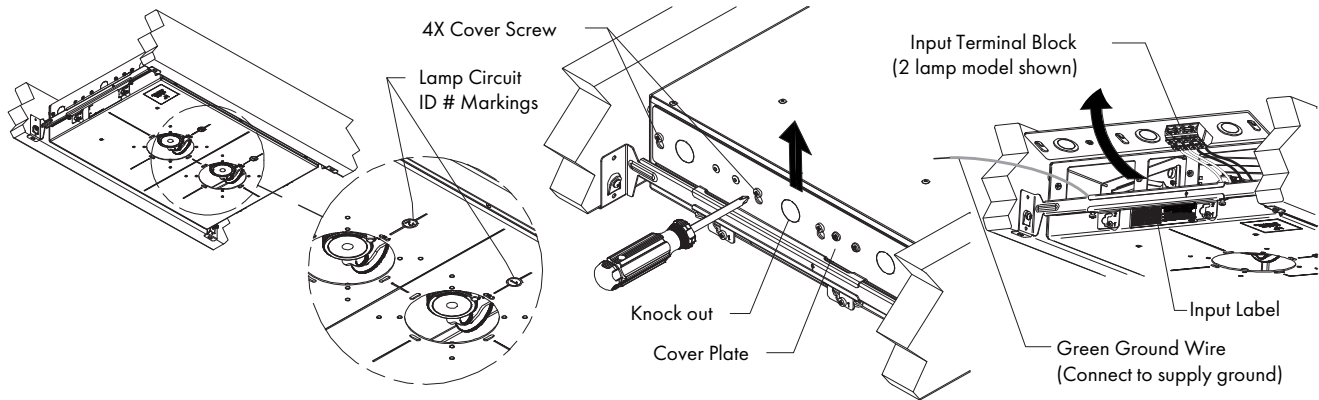

**FIG 23.1** Terminal Block Access

## All Lamps Controlled Together

**PR1 - PHASE CONTROL**

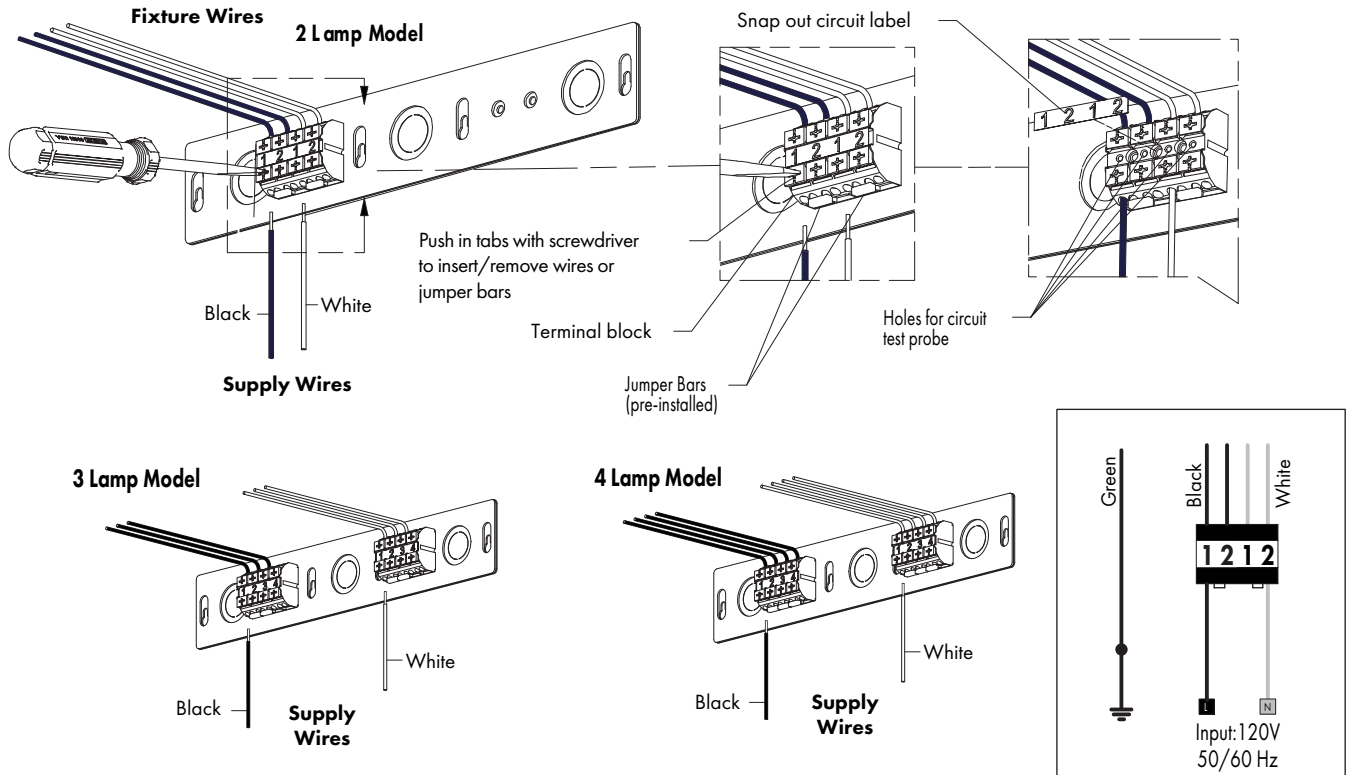

**Phase Control Notes:**

**PR1** drivers are Forward or Reverse Phase dimmable.

For compatible dimmers for use with **PR1** drivers see: [www.8lighting.com/resources-downloads](http://www.8lighting.com/resources-downloads)

**FIG 23.2** Connect Wiring

# MULTI-LAMP WIRING INSTRUCTIONS

## All Lamps Controlled Together

EL1/EL1-01 - 0-10V CONTROL


**STEP 1** Ensure jumper bars are installed in terminal blocks as shown - **FIG 24.1**.

**STEP 2** Make wire connections noting individual lamp circuit numbers - **FIG 24.2 & 24.3**.


**STEP 3** Check circuit continuity using holes in terminal blocks - **FIG 24.4**

**STEP 4** Push all wires completely inside wiring compartment - **FIG 23.1 (Page 23)**.


**STEP 5** Replace & secure box cover plate using screws provided - **FIG 23.1 (Page 23)**.

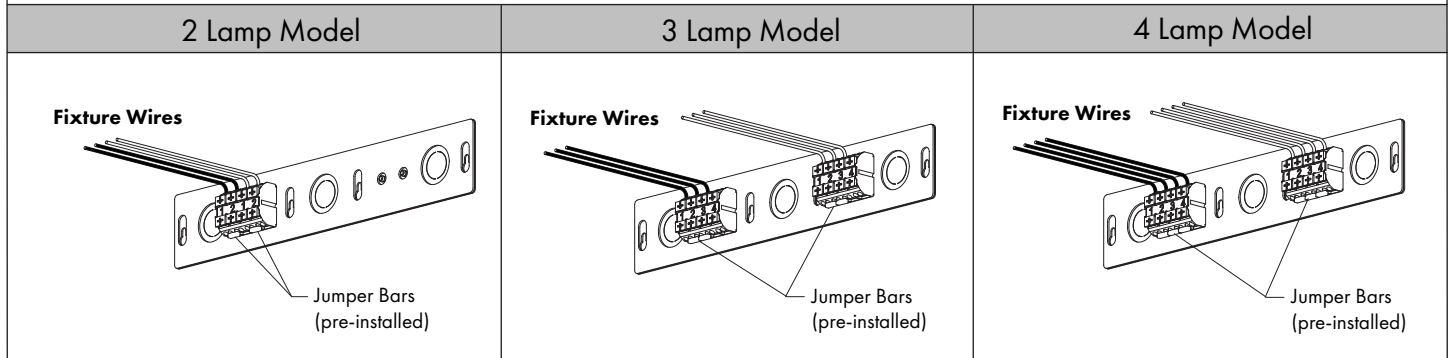


**FIG 24.1** Jumper Bars

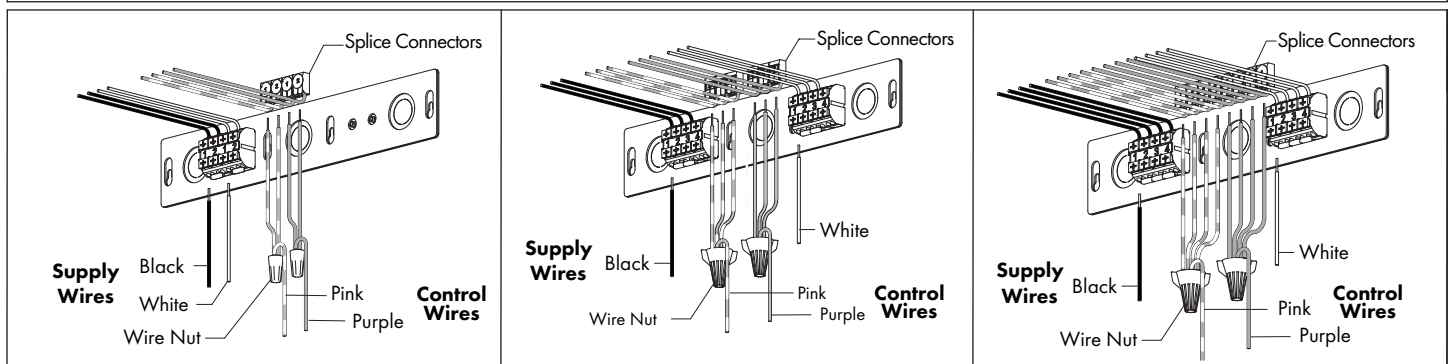

**FIG 24.2** Attach Supply & Control Wires

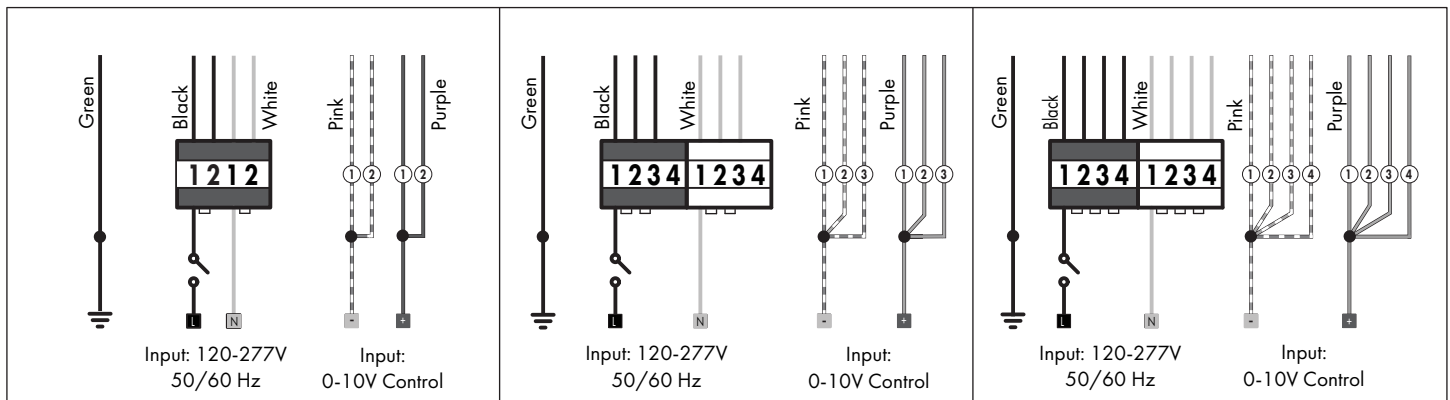

**FIG 24.3** Wiring Schematics

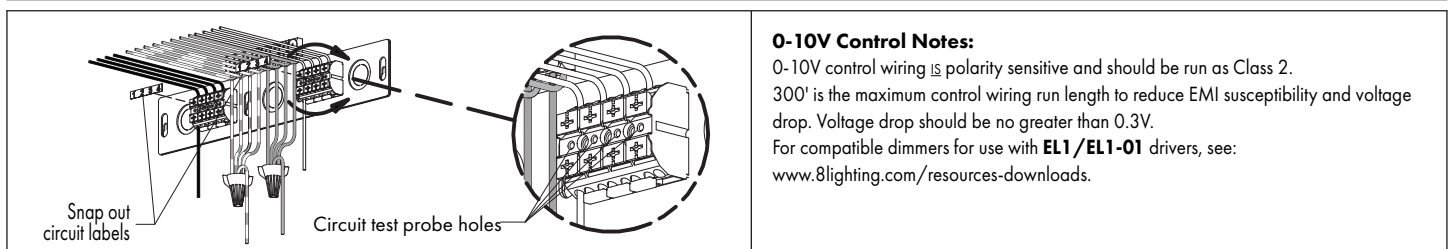

**FIG 24.4** Accessing Circuit Probe Holes

# MULTI-LAMP WIRING INSTRUCTIONS

## Individual Lamp Control

### PR1 - PHASE CONTROL


**STEP 1** Remove jumper bars from terminal blocks as needed for individual lamp control - **FIG 25.1**.

**STEP 2** Make wire connections noting individual lamp circuit numbers - **FIG 25.2 & 25.3**.


**STEP 3** Check circuit continuity using holes in terminal blocks - **FIG 25.4**.

**STEP 4** Push all wires completely inside wiring compartment - **FIG 23.1 (Page 23)**.


**STEP 5** Replace & secure box cover plate using screws provided - **FIG 23.1 (Page 23)**.

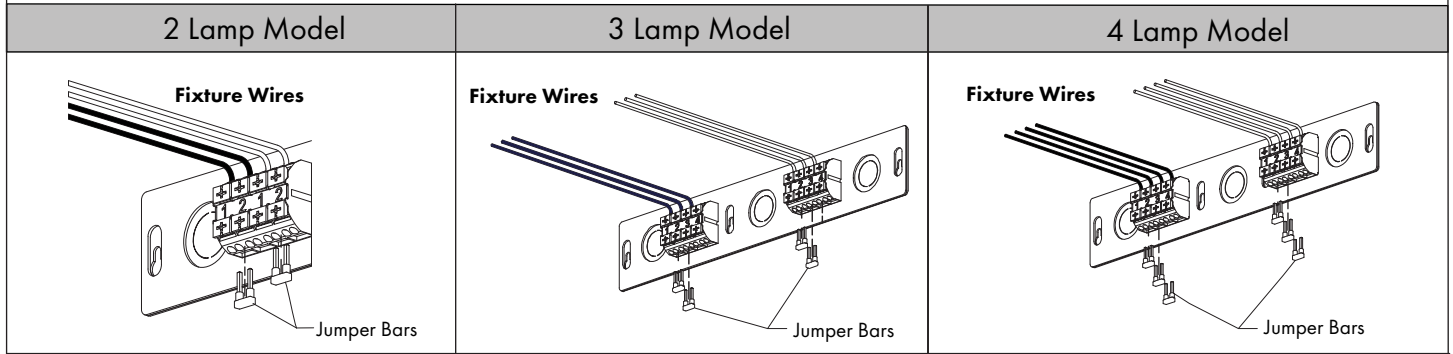


**FIG 25.1** Remove Jumper Bars

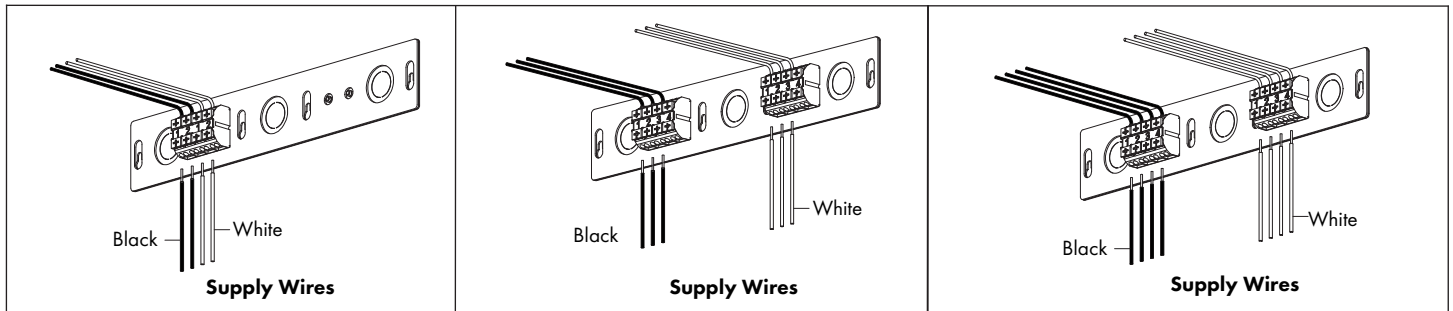

**FIG 25.2** Attach Supply Wires

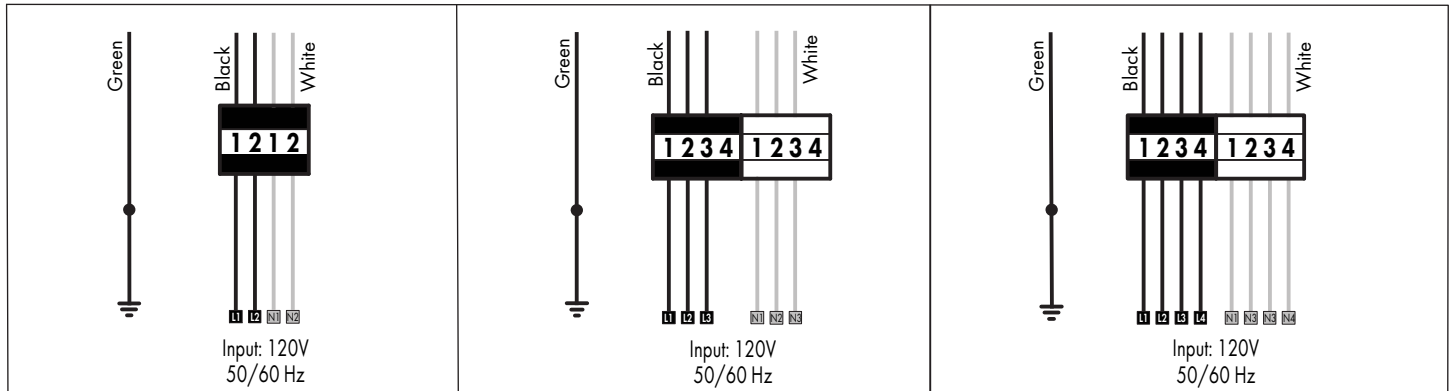

**FIG 25.3** Wiring Schematics

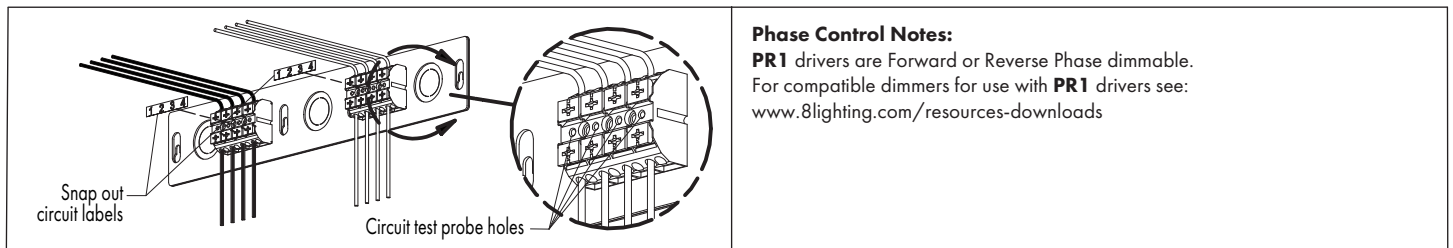


**FIG 25.4** Accessing Circuit Probe Holes

# MULTI-LAMP WIRING INSTRUCTIONS


## Individual Lamp Control

EL1/EL1-01 - 0-10V CONTROL


- STEP 1** Remove jumper bars from terminal blocks as needed for individual lamp control - **FIG 26.1**.
- STEP 2** Make wire connections noting individual lamp circuit numbers - **FIG 26.2 & 26.3**.
- STEP 3** Check circuit continuity using holes in terminal blocks - **FIG 26.4**.
- STEP 4** Push all wires completely inside wiring compartment - **FIG 23.1 (Page 23)**.
- STEP 5** Replace & secure box cover plate using screws provided - **FIG 23.1 (Page 23)**.

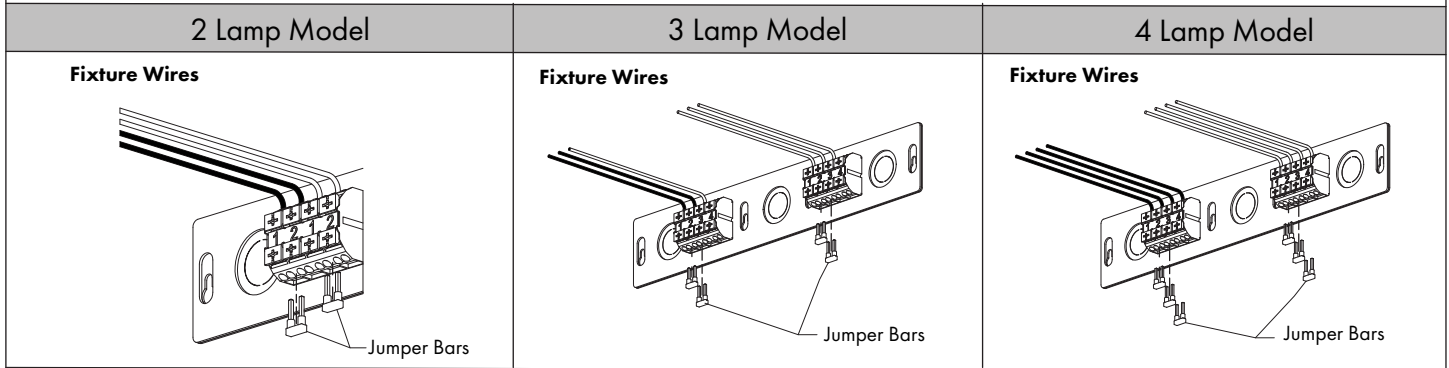


**FIG 26.1** Remove Jumper Bars

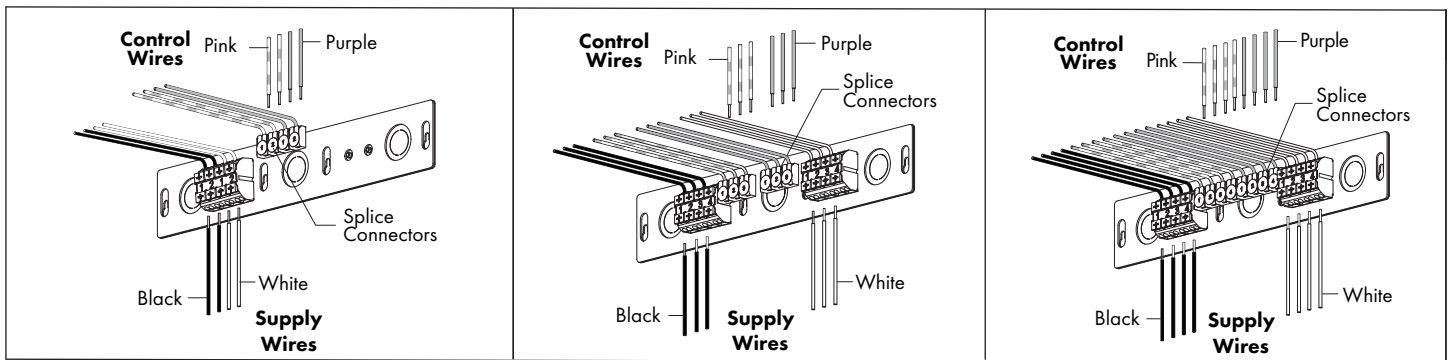

**FIG 26.2** Attach Supply & Control Wires

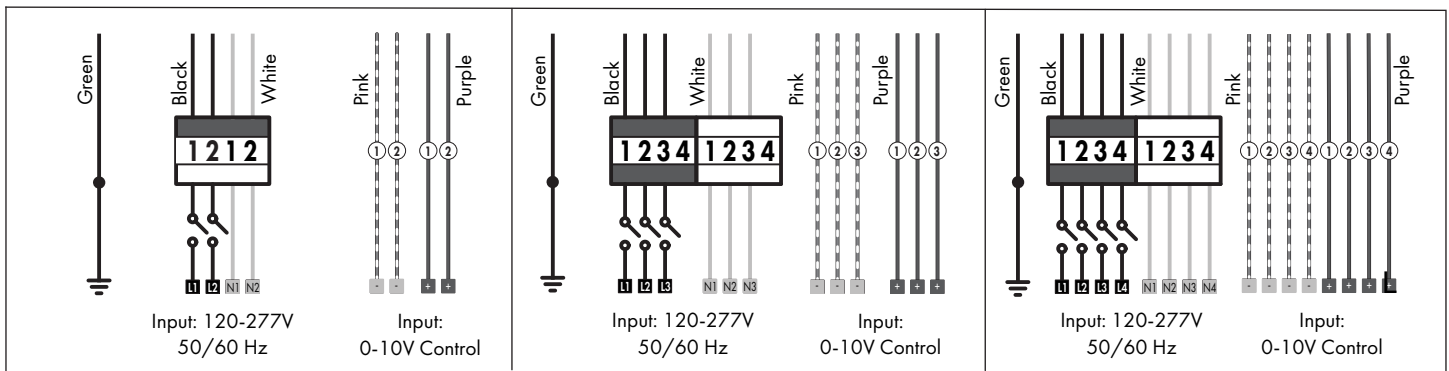

**FIG 26.3** Wiring Schematics

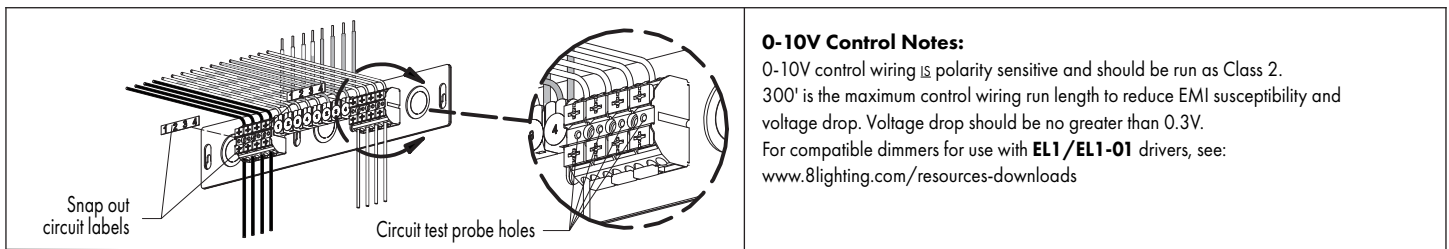


**FIG 26.4** Accessing Circuit Probe Holes

# MULTI-LAMP WIRING INSTRUCTIONS


## All Lamps Controlled Together or Individually

EL2/EL2-01 - DALI CONTROL


- STEP 1** Remove jumper bars from terminal blocks as needed for individual lamp control - **FIG 27.1**.
- STEP 2** Make wire connections noting individual lamp circuit numbers - **FIG 27.2 & 27.3**.
- STEP 3** Check circuit continuity using holes in terminal blocks - **FIG 27.4**.
- STEP 4** Push all wires completely inside wiring compartment - **FIG 23.1** (page 22).
- STEP 5** Replace & secure box cover plate using screws provided - **FIG 23.1** (page 22).

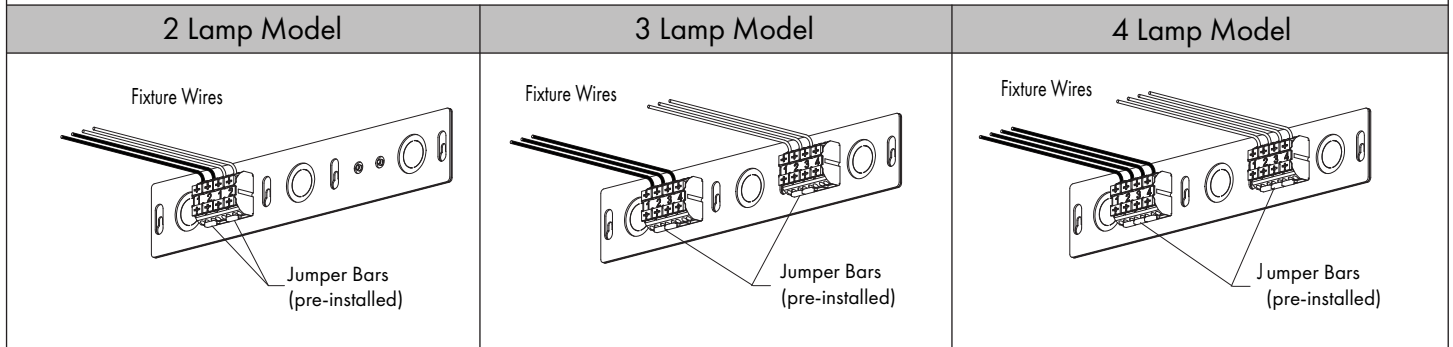


**FIG 27.1** Jumper Bars

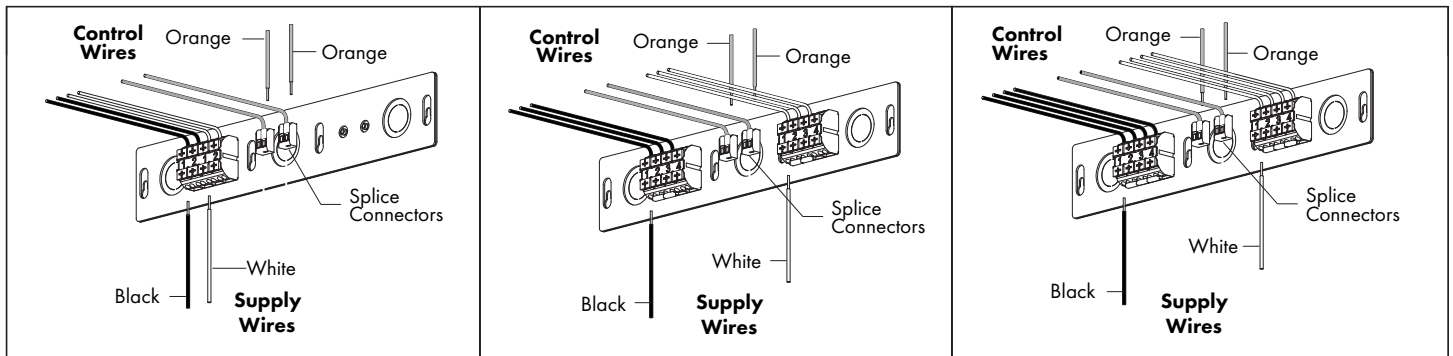

**FIG 27.2** Attach Supply & Control Wires

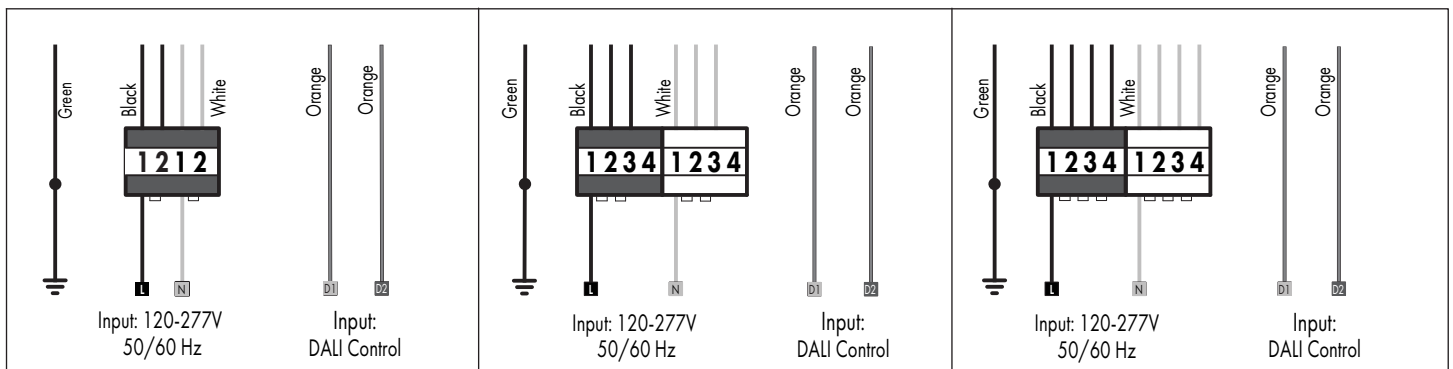

**FIG 27.3** Wiring Schematics

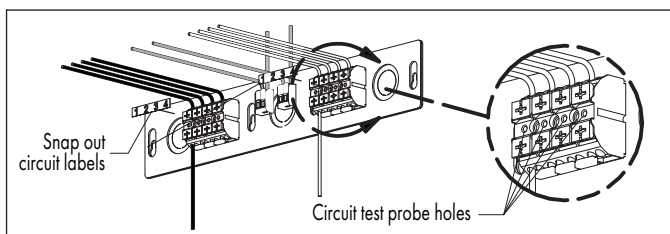

**DALI Control Notes:**

DALI control wiring is not polarity sensitive and can be run as Class 1 or 2. Up to 64 **EL2/EL2-01** drivers can be daisy chained per DALI control loop. Maximum control wiring run length is 1000'. For compatible dimmers for use with **EL2/EL2-01** drivers see: [www.8lighting.com/resources-downloads](http://www.8lighting.com/resources-downloads)


**FIG 27.4** Accessing Circuit Probe Holes

# MULTI-LAMP WIRING INSTRUCTIONS


## All Lamps Controlled Together or Individually

LU2 / LU4 - ECOSYSTEM CONTROL


- STEP 1** Remove jumper bars from terminal blocks as needed for individual lamp control - **FIG 28.1**.  
**STEP 2** Make wire connections noting individual lamp circuit numbers - **FIG 28.2 & 28.3**.  
**STEP 3** Check circuit continuity using holes in terminal blocks - **FIG 28.4**.  
**STEP 4** Push all wires completely inside wiring compartment - **FIG 23.1 (Page 23)**.  
**STEP 5** Replace & secure box cover plate using screws provided - **FIG 23.1 (Page 23)**.

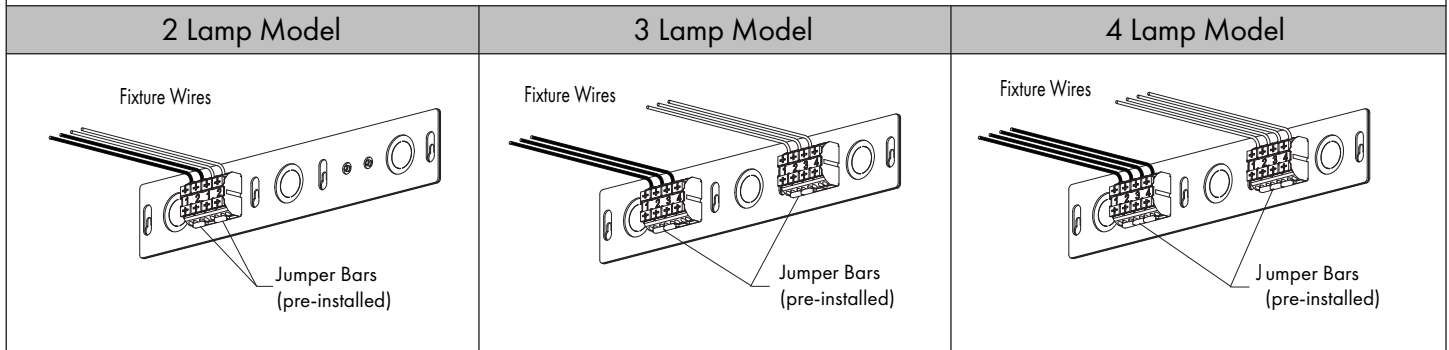


**FIG 28.1** Jumper Bars

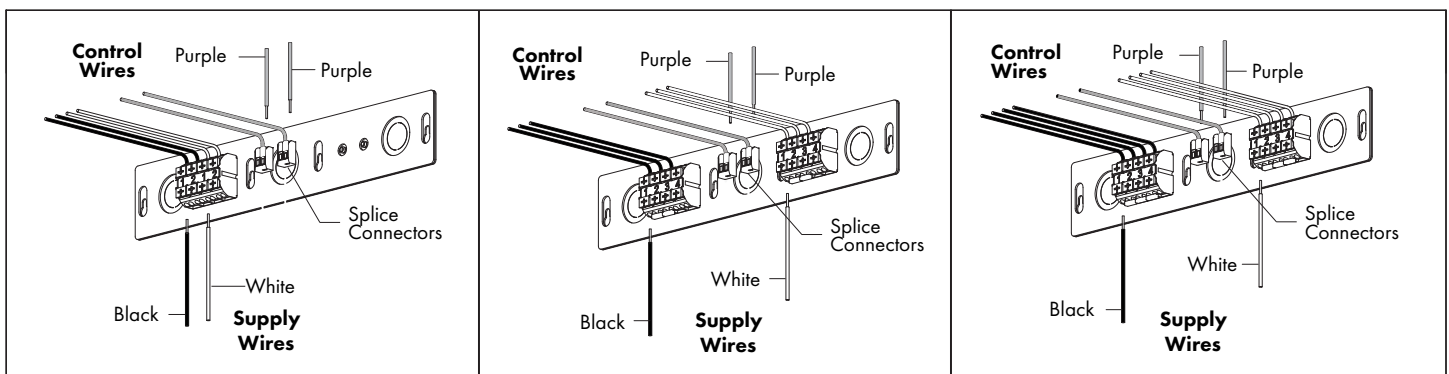

**FIG 28.2** Attach Supply & Control Wires

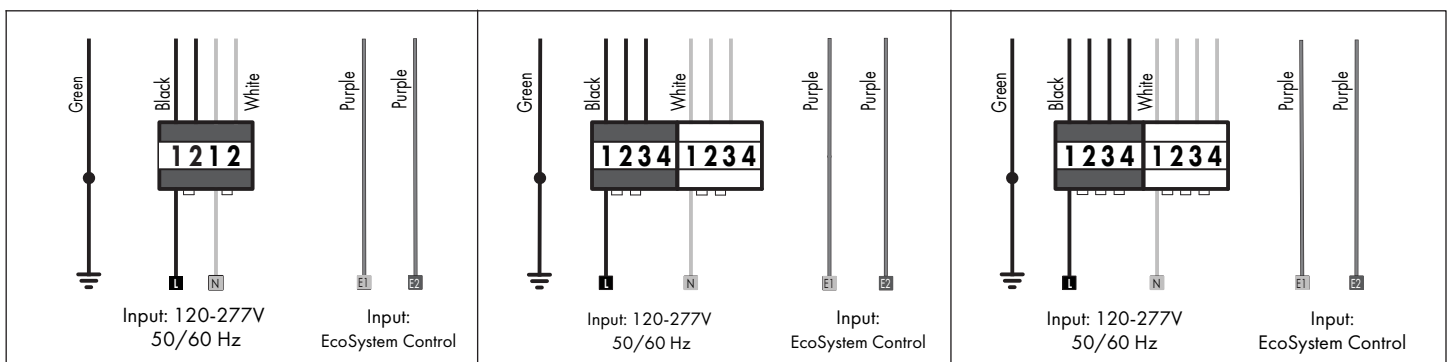

**FIG 28.3** Wiring Schematics

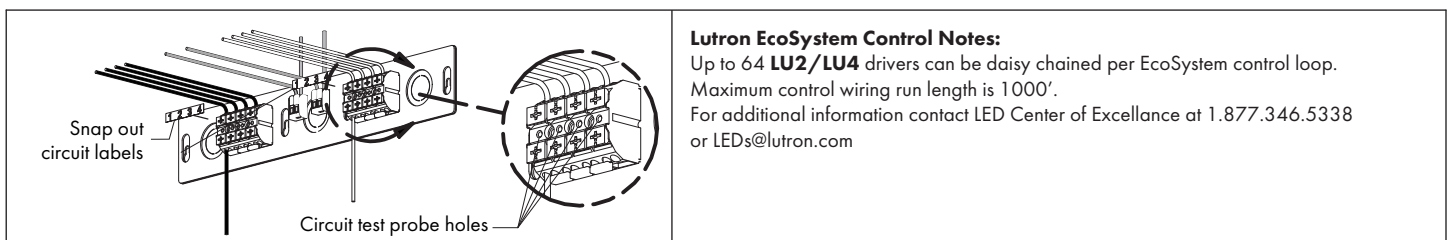

**FIG 28.4** Accessing Circuit Probe Holes

# MULTI-LAMP WIRING INSTRUCTIONS

## All Lamps Controlled Together or Individually


### DMX1 - DMX CONTROL

**STEP 1** Make wire connections noting individual lamp circuit numbers – **FIG 29.1, 29.2 & 29.3.**


**STEP 2** Check circuit continuity using holes in terminal blocks – **FIG 29.4.**

**STEP 3** Push all wires completely inside wiring compartment – **FIG 23.1 (Page 23).**


**STEP 4** Replace & secure box cover plate using screws provided – **FIG 23.1 (Page 23).**

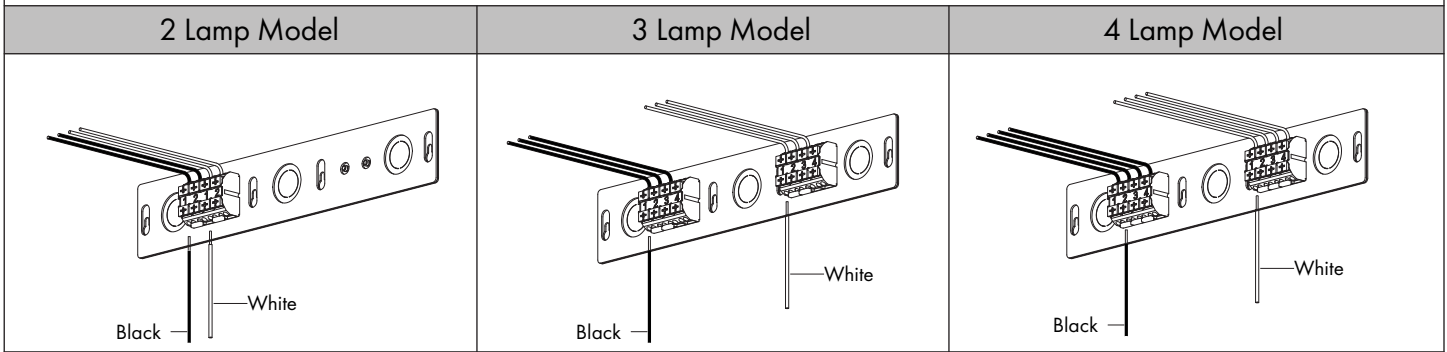


**FIG 29.1** Input Power Wiring

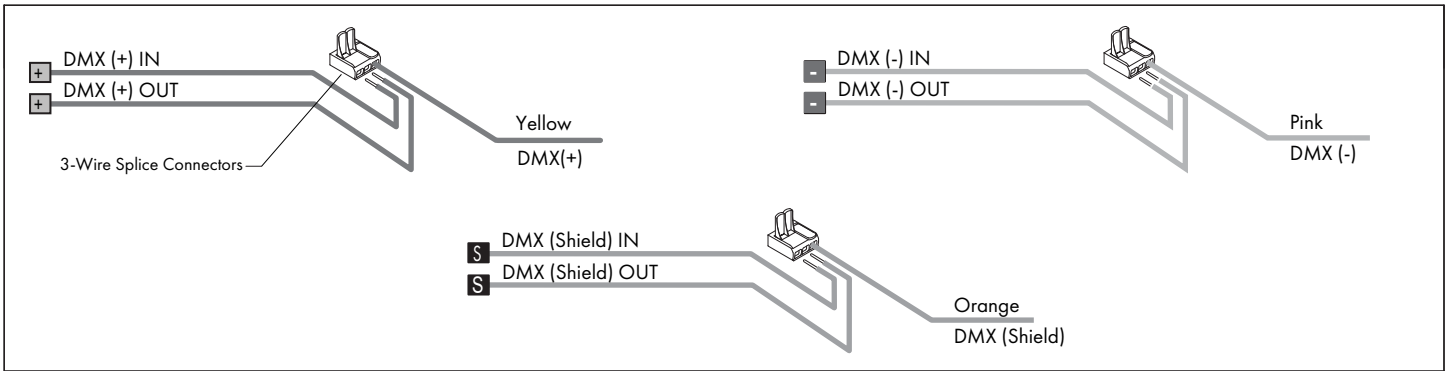

**FIG 29.2** Input Control Wiring

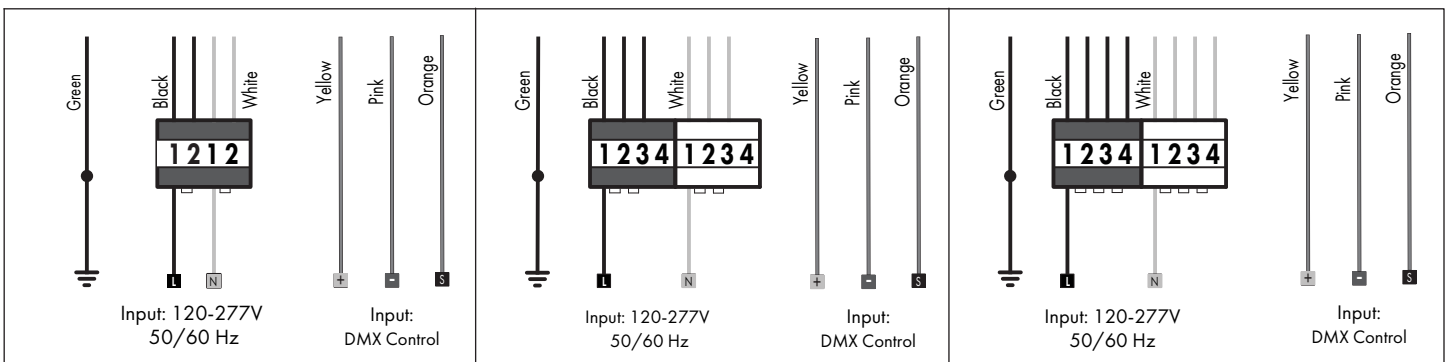

**FIG 29.3** Wiring Schematics

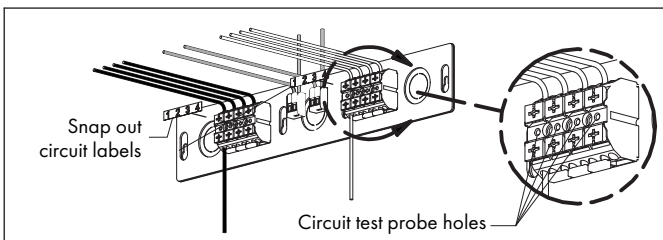

**FIG 29.4** Accessing Circuit Probe Holes

**DMX Notes:**

DMX control wiring is polarity sensitive and should be run as Class 2. Each **DMX1** driver is one "unit load". DMX runs without a repeater/signal booster should be limited to no more than 32 drivers including controller depending on the site conditions. **DMX1** drivers are RDM compatible and addressable by others in the field. Termination of the DMX runs is to be done by others per DMX512A specification. Maximum control wiring run length is 1000'.

For compatible dimmers for use with **DMX1** drivers see: [www.8lighting.com/resources-downloads](http://www.8lighting.com/resources-downloads).

# MULTI-LAMP WIRING INSTRUCTIONS - 2 CHANNEL TUNABLE WHITE

## All Lamps Controlled Together or Individually


### EL3 - 2 CHANNEL DALI CONTROL

**STEP 1** Make wire connections noting individual lamp circuit numbers – **FIG 30.1, 30.2 & 30.3.**


**STEP 2** Check circuit continuity using holes in terminal blocks – **FIG 30.4.**

**STEP 3** Push all wires completely inside wiring compartment – **FIG 23.1 (Page 23).**


**STEP 4** Replace & secure box cover plate using screws provided – **FIG 23.1 (Page 23).**

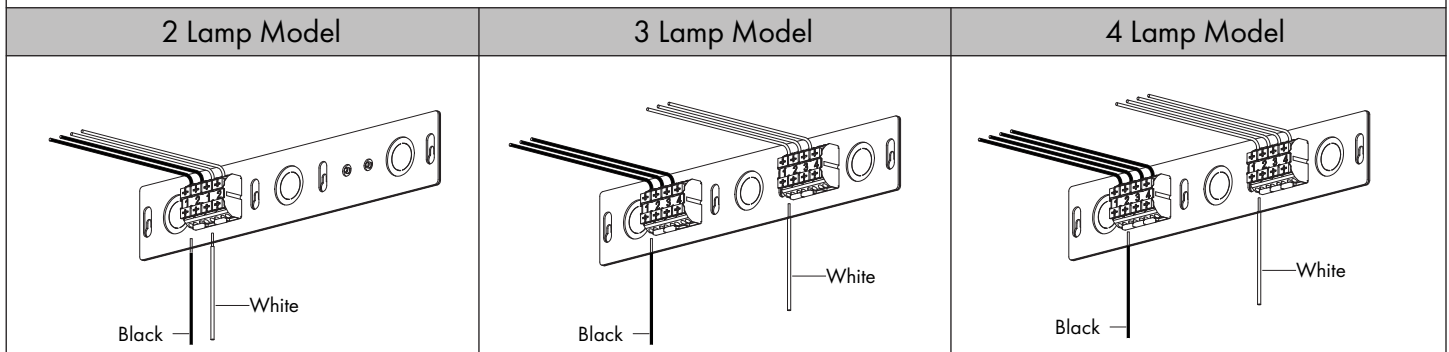


**FIG 30.1** Input Power Wiring

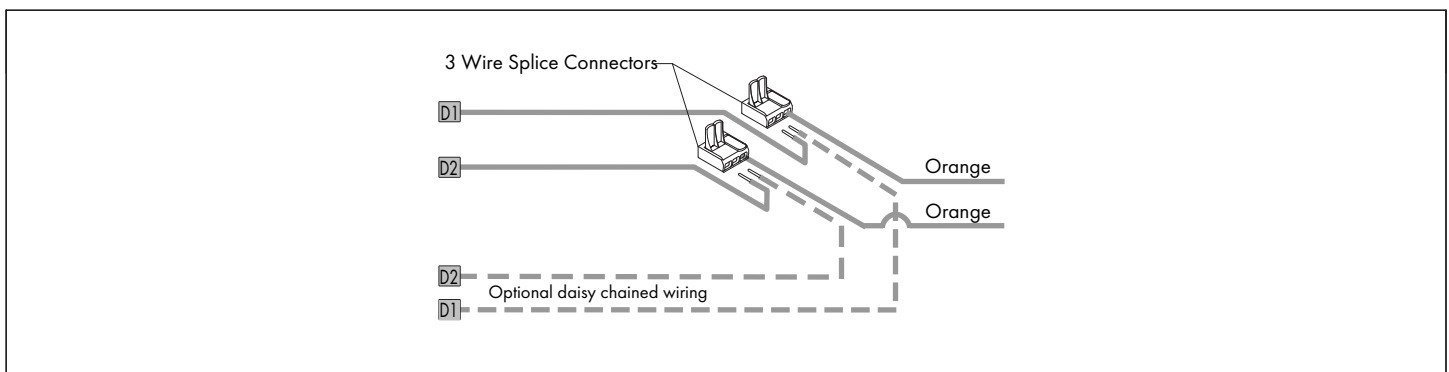

**FIG 30.2** Input Control Wiring

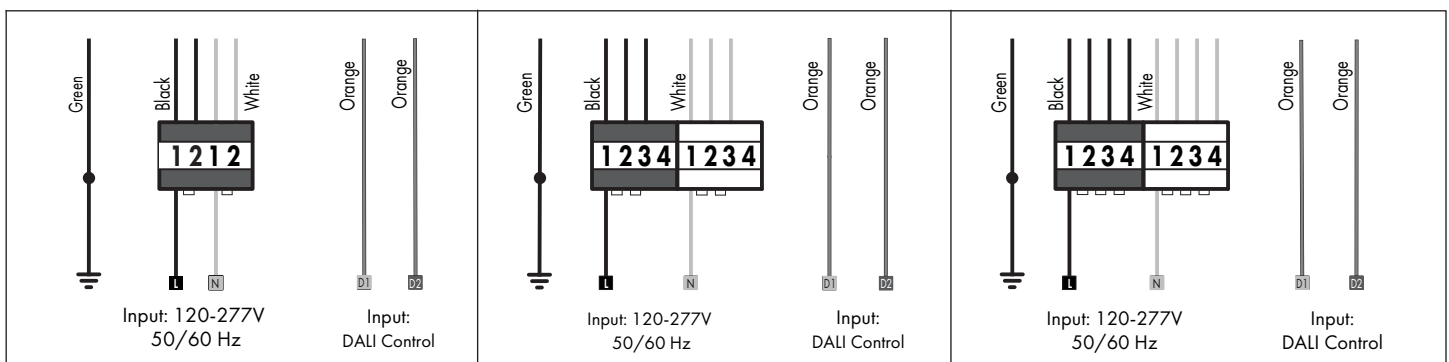

**FIG 30.3** Wiring Schematics

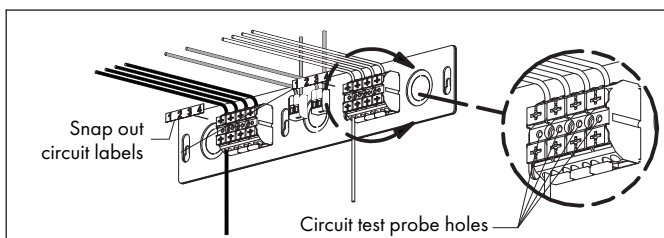

**FIG 30.4** Accessing Circuit Probe Holes

#### DALI Control Notes:

DALI control wiring is not polarity sensitive and can be run as Class 1 or 2.

Up to 32 **EL3** drivers can be daisy chained per DALI control loop.

Maximum control wiring run length is 1000’.

For compatible dimmers for use with **EL3** drivers see:

[www.8lighting.com/resources-downloads](http://www.8lighting.com/resources-downloads)

# MULTI-LAMP WIRING INSTRUCTIONS - 2 CHANNEL TUNABLE WHITE

## All Lamps Controlled Together or Individually


### EL5 - 2 CHANNEL 0-10V CONTROL

**STEP 1** Make wire connections noting individual lamp circuit numbers – **FIG 31.1, 31.2 & 31.3.**


**STEP 2** Check circuit continuity using holes in terminal blocks – **FIG 31.4.**

**STEP 3** Push all wires completely inside wiring compartment – **FIG 23.1 (Page 23).**


**STEP 4** Replace & secure box cover plate using screws provided – **FIG 23.1 (Page 23).**

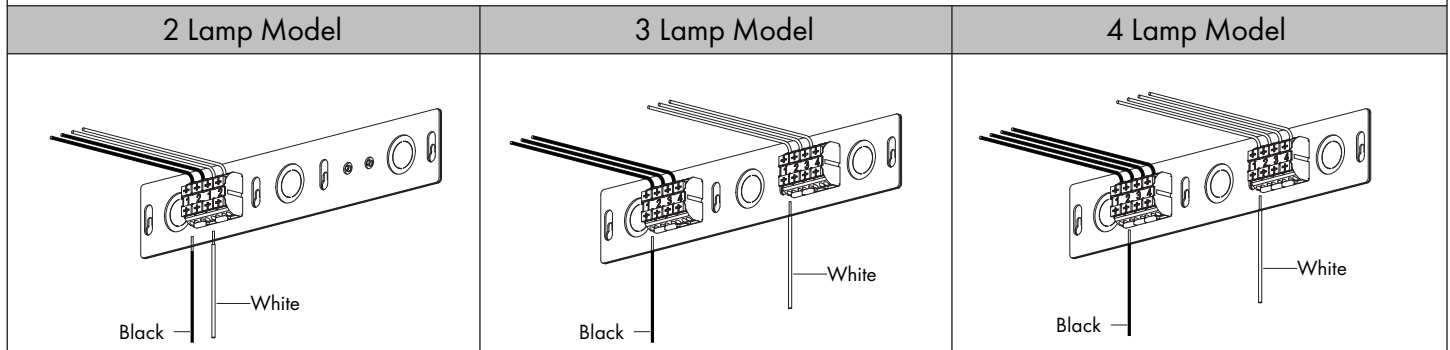


**FIG 31.1** Input Power Wiring

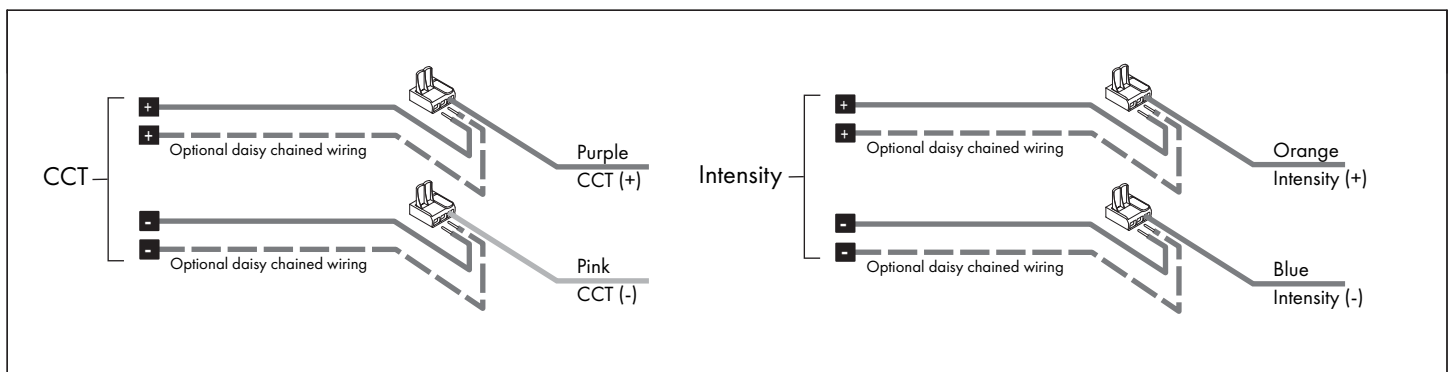

**FIG 31.2** Input Control Wiring

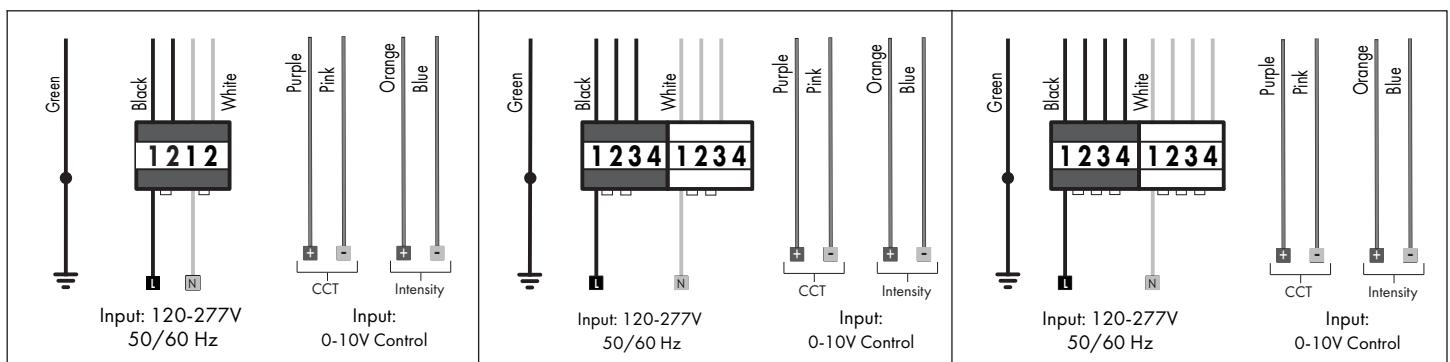

**FIG 31.3** Wiring Schematics

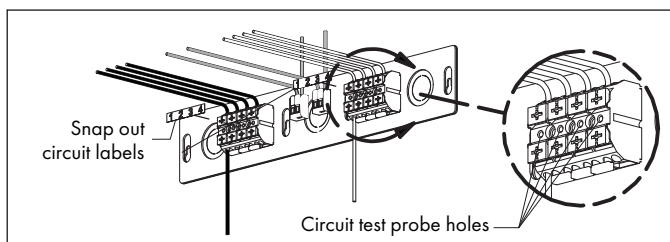

**0-10V Control Notes:**

0-10V control wiring is polarity sensitive and should be run as Class 2. Each **EL5** driver requires two pairs of Class 2 control wires: one pair for CCT and one pair for INTENSITY. 300' is the maximum control wiring run length to reduce EMI susceptibility and voltage drop. Voltage drop should be no greater than 0.3V. For compatible dimmers for use with **EL5** drivers see: [www.8lighting.com/resources-downloads](http://www.8lighting.com/resources-downloads).

**FIG 31.4** Accessing Circuit Probe Holes

# MULTI-LAMP WIRING INSTRUCTIONS - 2 CHANNEL TUNABLE WHITE

## All Lamps Controlled Together or Individually


### DMX2 - 2 CHANNEL DMX CONTROL

**STEP 1** Make wire connections noting individual lamp circuit numbers – **FIG 32.1, 32.2 & 32.3.**


**STEP 2** Check circuit continuity using holes in terminal blocks – **FIG 32.4.**

**STEP 3** Push all wires completely inside wiring compartment – **FIG 23.1 (Page 23).**


**STEP 4** Replace & secure box cover plate using screws provided – **FIG 23.1 (Page 23).**

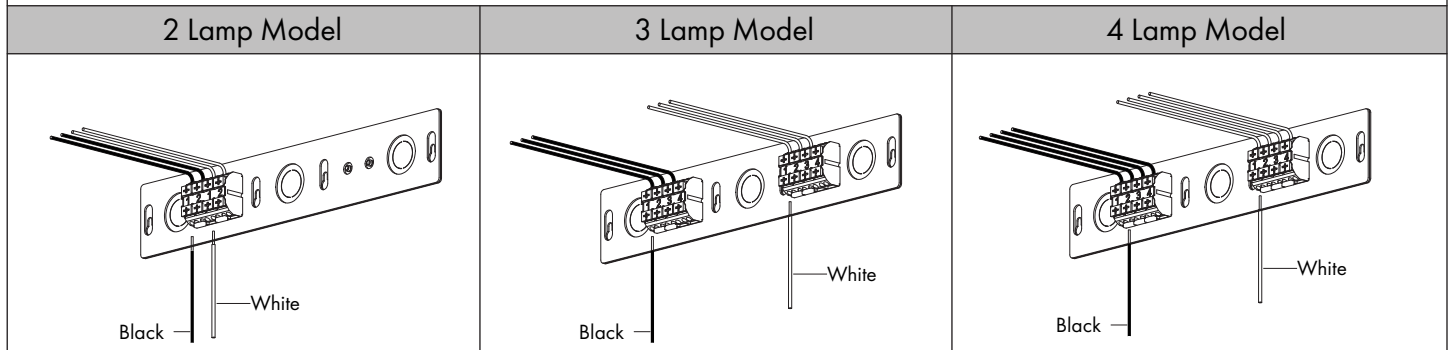


**FIG 32.1** Input Power Wiring

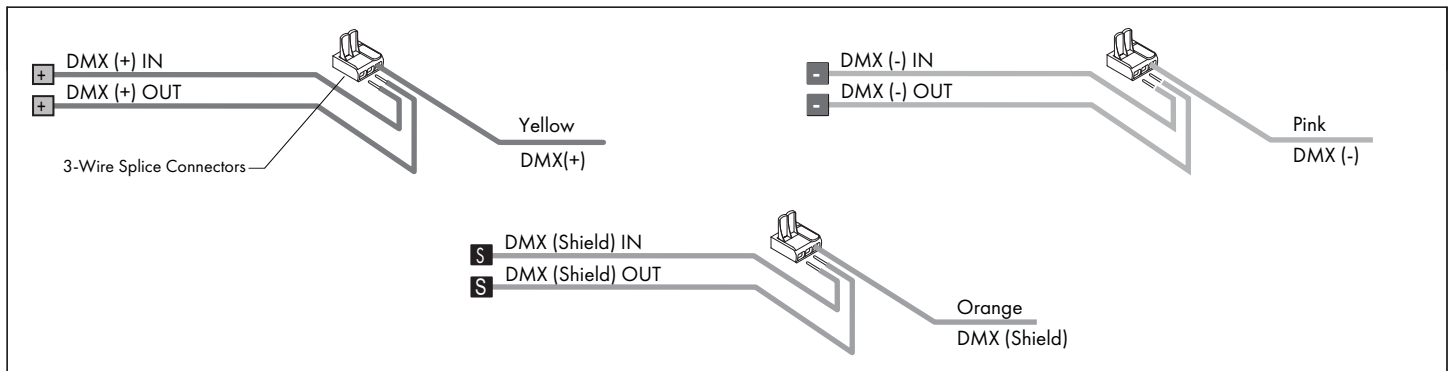

**FIG 32.2** Input Control Wiring

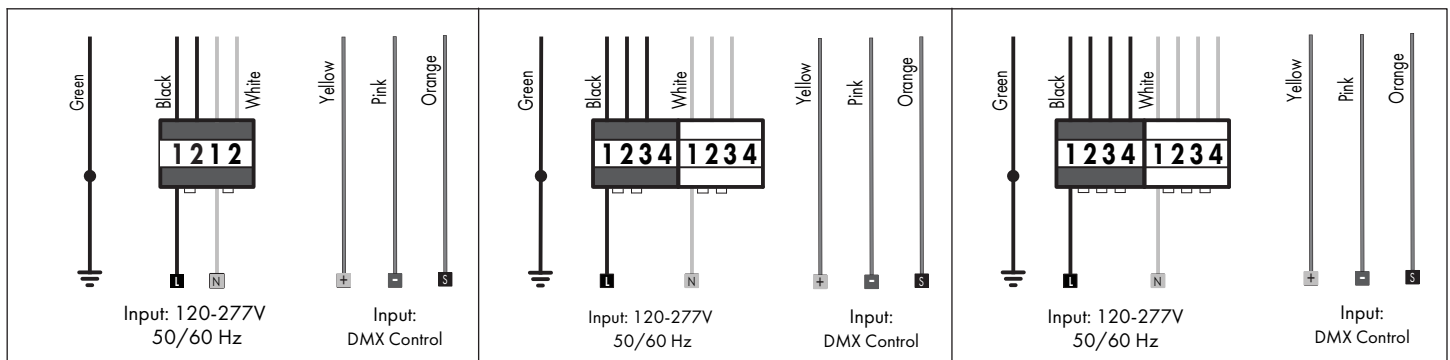

**FIG 32.3** Wiring Schematics

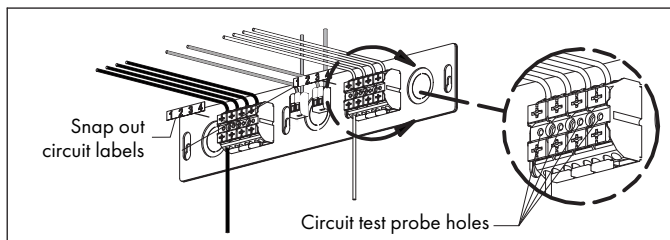

**FIG 32.4** Accessing Circuit Probe Holes

**DMX Notes:**

DMX control wiring is polarity sensitive and should be run as Class 2. Each **DMX2** driver is one "unit load". DMX runs without a repeater/signal booster should be limited to no more than 32 drivers including controller depending on the site conditions. **DMX2** drivers are RDM compatible and addressable by others in the field. Termination of the DMX runs is to be done by others per DMX512A specification. Maximum control wiring run length is 1000'.

For compatible dimmers for use with **DMX2** drivers see: [www.8lighting.com/resources-downloads](http://www.8lighting.com/resources-downloads).



[www.8lighting.com](http://www.8lighting.com)

**Number Eight Lighting Company**

526 Portal Street, Cotati, CA 94931

Phone (707) 794-0888 • Email [customerservice@8lighting.com](mailto:customerservice@8lighting.com)