Wall Wash Trim Plate Installation Instructions
Recessed Housing Model 400 & 800 Series

N°
eight
LIGHTING

WW4 Trim Plate Models For 400 Series Housings

Step 1 Unlock & adjust lamp head to 20° vertical aiming angle for optimal wall wash performance-FIG 1.1.

Step 2 Unlock & adjust horizontal aiming angle to aim light towards wall surface to be illuminated-FIG 1.2.
Install Housing so Cable Screw is close to wall as shown below so Safety Cable on Trim plate can reach the hole.
Secure Lock Screws for orientation desired.

Note: Magnets will permit Trim Plates to only be installed in 4 horizontal orientations. If an in-between position is desired, the
fixture housing Lock Screws can be loosened & the Housing can be rotated to position needed (refer to Model 400 Installation
Instruction for details).

Step 3 Orient & install Wall Wash Trim Plate into Trim as shown-FIG 1.3.

Vertical
lock

FIG 1.1 Adjust Vertical & Horizontal Aiming Angle

Horizontal
lock knob

Important: Install Housing so Cable Screw
is oriented closest to wall as shown.

Wall Line

FIG 1.2 Adjust Horizontal position

Insert cable into side hole & secure
with Hex Key

LED Holder

Wall Wash
Trim Plate

Install so Wall
Wash Trim aligns
to LED Holder

Wall

1/16" Hex Key

FIG 1.3 Install into Housing

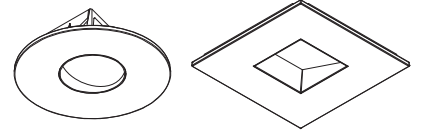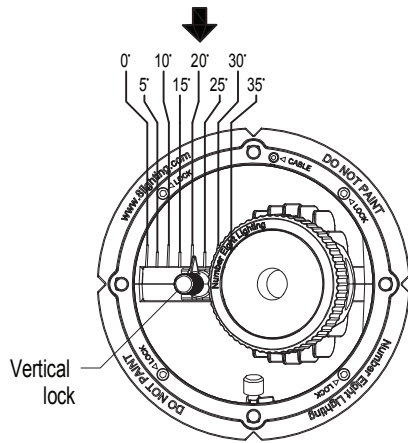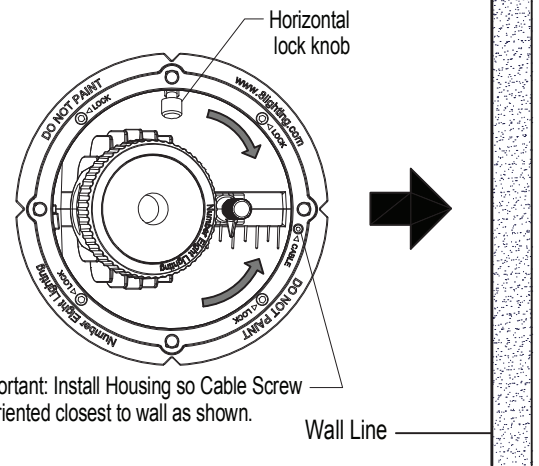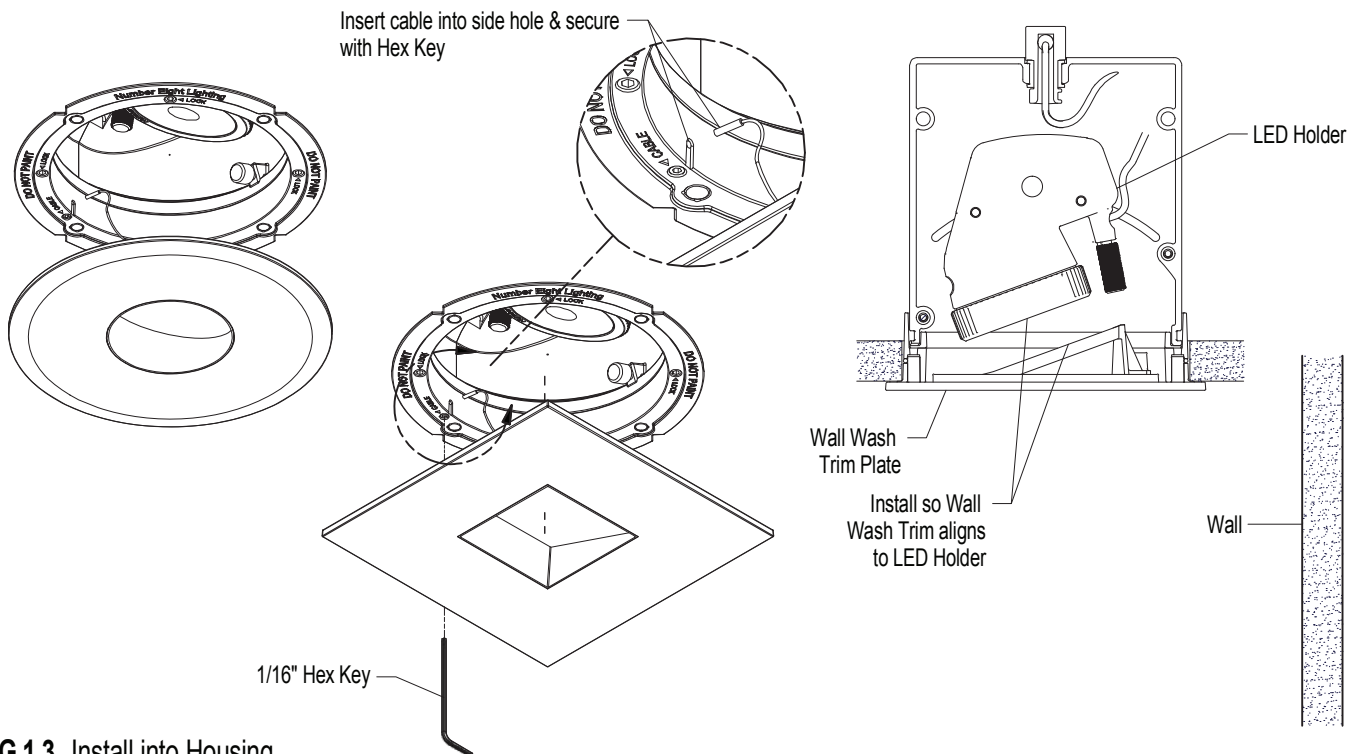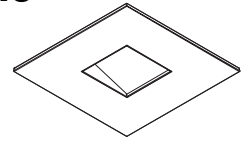# Wall Wash Trim Plate Installation Instructions
Recessed Housing Model 400 & 800 Series

WW-8 Trim Plate Models for 800 Series Housings

Important: WW-8 Trim Plates can only be used with J, J2 & J2S Lamp Modules. Use 40° TIR Optic for optimal performance.
Diffuser Lens accessories are not recommended.

Step 1 Unlock & adjust J Lamp Module to 20° vertical aiming angle for optimal wall wash performance-FIG 2.1.

Step 2 Unlock & adjust horizontal position to aim light towards wall surface to be illuminated-FIG 2.2.

Step 3 Orient & install Wall Wash Trim Plate into Trim as shown-FIG 2.3.
   Note: Magnets will permit Trim Plates to only be installed in 4 horizontal orientations. An in-between position can be achieved only with Round Wood Trim Kits (not shown).
   Refer to P/N 10301 Wood/Stone Trim Installation Instruction for details.
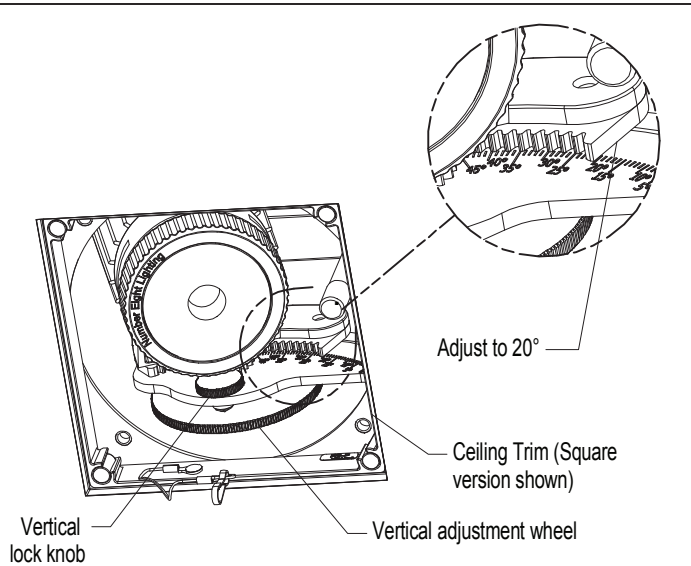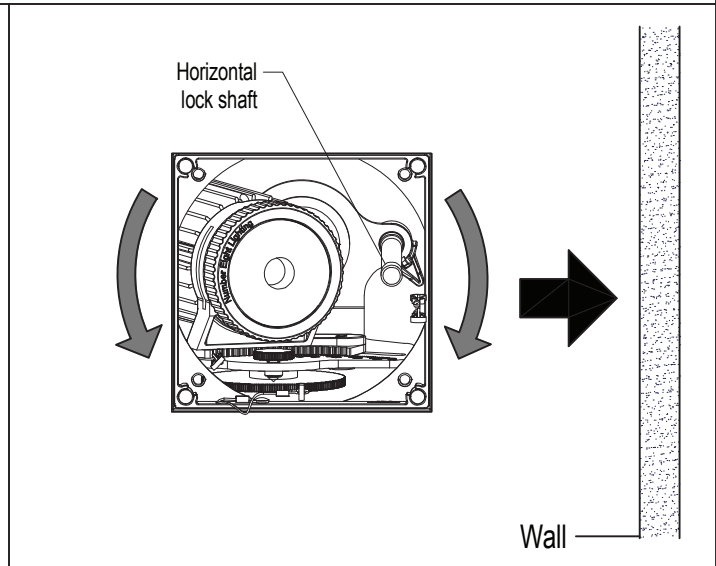

Adjust to 20°

Ceiling Trim (Square version shown)

Vertical lock knob

Vertical adjustment wheel

FIG 2.1 Adjust Vertical Aiming Angle

Horizontal lock shaft

Wall

FIG 2.2 Adjust Horizontal position

4x Magnets

Attach Safety Cable clips together. Be sure Cable assembly doe not obstruct lenses

Install so Wall Wash Trim Plate aligns to Lamp Module as shown
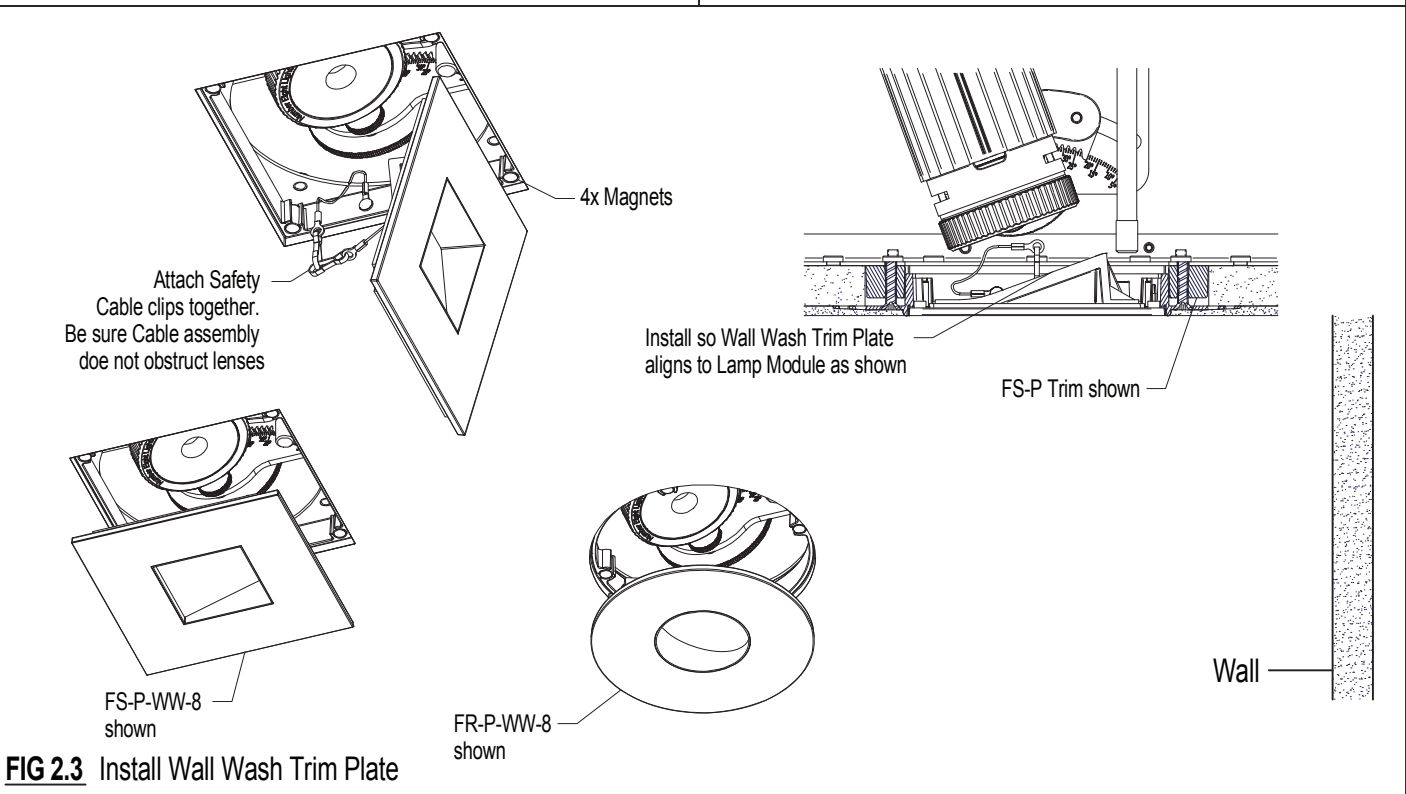
FS-P Trim shown

Wall

FS-P-WW-8 shown

FR-P-WW-8 shown

FIG 2.3 Install Wall Wash Trim Plate